

# JVC

## Quick Start Guide

# 32" HD-Ready LED TV with DVD

LT-32C345 / LT-32C346

**Thank you** for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup. Please follow this guide for a successful first time installation.



The latest eco-friendly power-saving technology will switch off the TV if device is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

 
### 1 Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

- |   |  |
|---|--|
| <input checked="" type="checkbox"/> TV                                  | <input checked="" type="checkbox"/> Screws x 4         |
| <input checked="" type="checkbox"/> TV Stand                            | <input checked="" type="checkbox"/> Instruction Manual |
| <input checked="" type="checkbox"/> Remote Control/<br>AAA Batteries x2 | <input checked="" type="checkbox"/> Quick Start Guide  |

### 3 Installing the Base Stand


1. Ensure the TV is switched off and not connected to the mains power supply.
2. Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
3. Slide the stand under the lip, the neck will fit snugly over the screw holes. Then screw the stand to the TV using the 4 screws supplied.

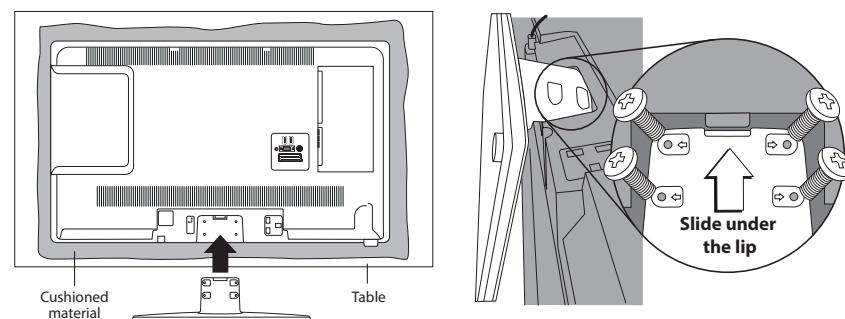

The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

### 4 Connecting the Aerial and Turning on the TV

 
1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
2. Plug the TV into a mains socket and switch on at the mains.
3. In standby mode, press the button on the remote control to turn the TV on. The red LED indicator will flash for a few seconds then the TV will switch on.

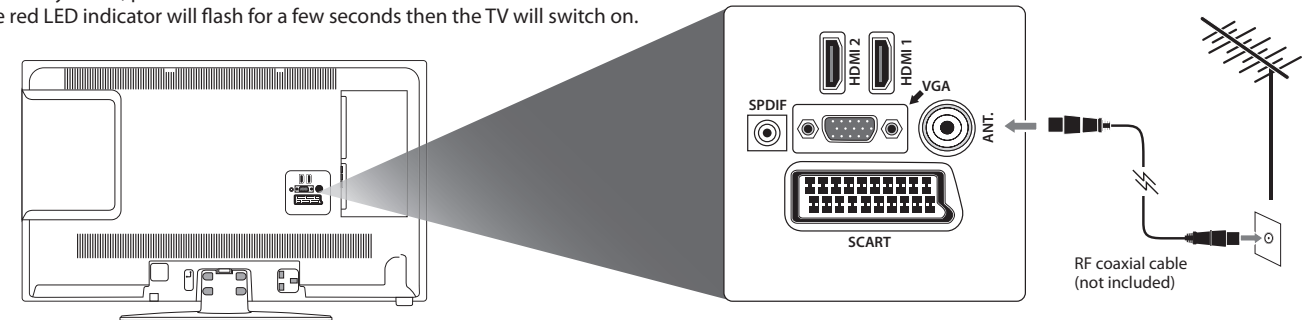


- Do not connect the TV to the mains supply until you have completed all the connections.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

### 5 Tuning in the TV

 
1. The first time you turn the TV on, it will go straight into the **First Time Installation** menu. Please ensure the aerial is plugged in. Press the buttons to highlight your language then press **OK**.
6. Confirm these settings by pressing **OK**.
7. Press the buttons to highlight Home Mode then press **OK**.

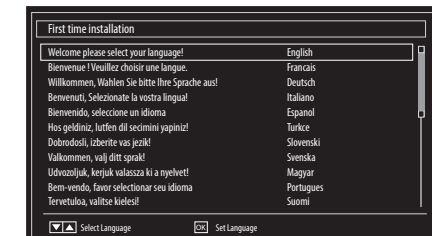


 
2. Press the buttons to select your country.

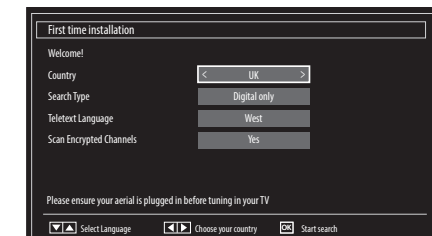

 3. Press the button to highlight Search Type, then press the buttons to select Digital Only. This will only search for the digital channels.
4. Press the button to highlight Teletext Language, then press the buttons to select your language. The majority of people will want this set to West.
5. Press the button to highlight Scan Encrypted Channel (pay-per-view channels), then press the buttons to select Yes or No.

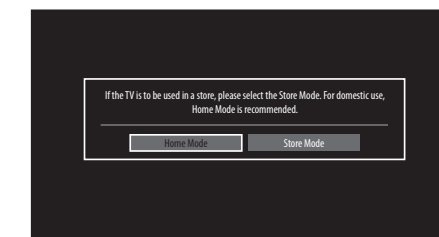

  
8. You will now be asked if you want to start the automatic channel scan. Press the buttons to highlight Yes and press **OK**.

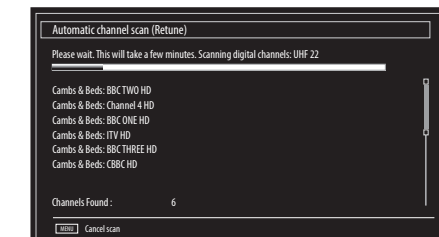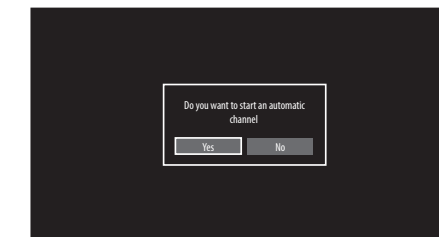


### Choose Region

During tuning, your TV may have received signals from more than one transmitter. If this has occurred the Choose Region screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

 1. Press the button to highlight **Primary region**, then press the buttons to select your Primary Region e.g. England.

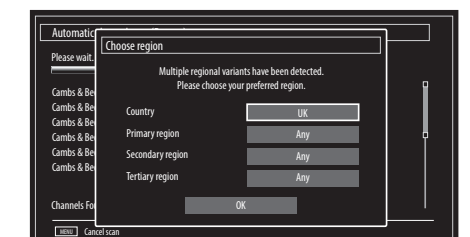

 2. Press the button to highlight **Secondary region**, then press the buttons to select your Secondary Region e.g. London.
3. Press the button to highlight **Tertiary region**, then press the buttons to select your Tertiary Region e.g. Greater London.
4. Press the button to highlight OK then press **OK**. Your TV is now fully tuned in.
5. The Edit Channel list will appear, press the **EXIT** button to remove this. Your TV is now fully tuned in and ready to use.

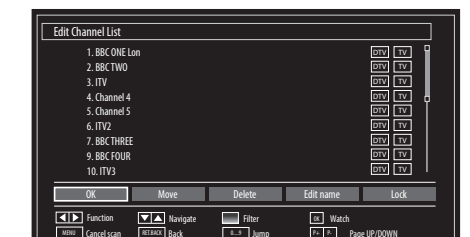

**Well done**, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV.

(QSG-LT-32C345/46-140408V1)