> ADVENT Instruction Manual



Wireless Mouse
AMWLBL15 / AMWLPP15
AMWLRD15 / AMWLWH16



Contents

Safety Warnings	4
Unpacking	5
Product Overview	6
Top View	6
Bottom View	6
System Requirements	7
Installing the Batteries	7
Connecting the Nano Dongle	8
Activating the Wireless Mouse	8
Changing DPI Resolutions	9
Sleep Mode	9
Hints and Tips	9
Specifications	10

Safety Warnings

Wireless Devices:

- Before boarding any aircraft or packing a wireless device in luggage that will be checked in, remove the batteries from the wireless device.
- Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turned on (If it has an On/Off switch).

Battery-Powered Devices:

- Improper use of batteries may result in battery fluid leakage, overheating, or explosion.
- Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed.

To Reduce the Risk of Injury:

- · Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- Do not mix new and old batteries or batteries of different types.
- Do not allow metal objects to touch the battery terminals on the device; they can become hot and cause burns.
- Never point the optical sensor toward the face, particularly the eyes, to avoid possible injury.
- While the mouse is functioning, optical light is visible to the naked eye.

Thank you for purchasing your new Product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

- · Main Unit (with Nano Dongle)
- AAA Size Battery x 2
- · Instruction Manual




If items are missing, or damaged please contact Partmaster (UK only).


Tel: 0344 800 3456 for assistance.

Product Overview

Top View

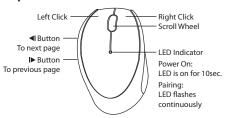

Bottom View

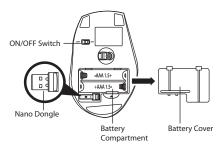

System Requirements

Operating Systems: Microsoft® Windows® 7 / 8 / 10

MAC OS X or later

Hardware: 1 available USB port

Installing the Batteries

When battery is low, the LED indicator will flash.

- 1. Press and lift the battery cover.
- 2. Insert 2 x AAA battery.
- 3. Close the battery cover.






Please ensure the batteries' polarities (+ / –) match the battery compartment's polarities.


Connecting the Nano Dongle

Remove the Nano Dongle from the mouse and then plug the Nano Dongle directly into your computer's USB port.

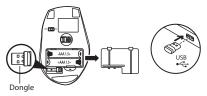

Activating the Wireless Mouse

Switch the **ON/OFF** button to power on the mouse and then the mouse will automatically connect to the Nano Dongle plugged into your computer.

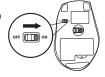



To save energy, switch the **ON/OFF** button to the off position to turn off the mouse and disconnect the mouse and the Nano Dongle.

c

Changing DPI Resolutions

Press and hold the left mouse button and scroll wheel for about 3 seconds.

Choose your preferred DPI: 800 - 1200 - 1600dpi.

Sleep Mode

If the mouse has not been used for more than 8 minutes, it switches to Sleep Mode.

To reactivate it, simply click the button.

Hints and Tips

Mouse not working:

- 1. Check that the power switch is in the on position.
- Make sure the Nano Dongle is plugged into a USB port and the computer is on or try the Nano Dongle in a different USB port.
- 3. Check battery installation. Replace battery if needed.
- 4. If mouse performance is slow or intermittent around a wireless network, unplug the Nano Dongle from the USB port and then reinsert it. To reactivate the mouse, switch it on, off and on again using the ON/OFF switch on the bottom of the mouse.

- Repeat the connection procedure. You can also try moving the mouse closer to the Nano Dongle.
- If the mouse is moving erratically, change the working surface which the mouse is operating on.

Specifications

Model	AMWLBL15 / AMWLPP15 AMWLRD15 / AMWLWH16
Wireless Frequency	2.4GHz
Operating Range	> 8m (open space)
Resolution	800 / 1200 / 1600 dpi
Frequency Band(s)	2406 – 2476 MHz
Max. Radio Frequency Power Transmitted	-5 dB
Dimension (L x W x H)	102 x 60 x 37 mm

Features and specifications are subject to change without prior notice.



For general information about this appliance and handy hints and tips, please visit

www.knowhow.com/knowledgebank or call 0344 561 1234.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can

deliver direct to your door the very next day. Visit **www.partmaster.co.uk** or call **0344 800 3456** (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handling it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and

ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.

The wireless LAN hardware in your product conforms to the requirements and provisions set out in European Directive 1999/5/EC (R&TTE). Limitations may apply for details go to www.currys.co.uk/compliance.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the property of their respective owners and all rights are acknowledged.