


Getting The Best From Your New Small Screen TV


Optimum Viewing Angles

The diagrams below demonstrate the optimum viewing angles for this TV.

Side View

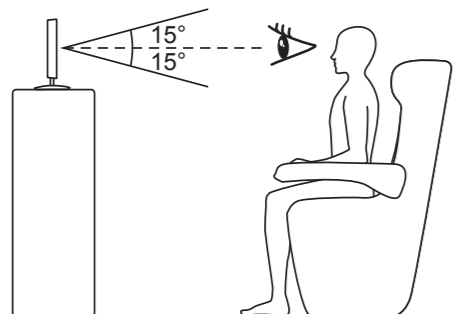


Top View

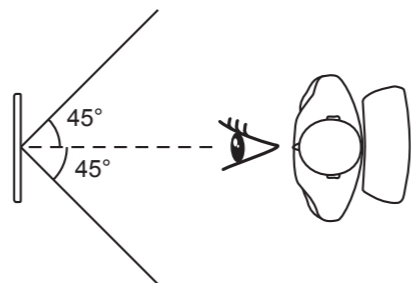


Reception and Tuning Tips

1. If you intend to use an indoor aerial, we recommend that you connect the TV to your main (outside) aerial for the first tuning.

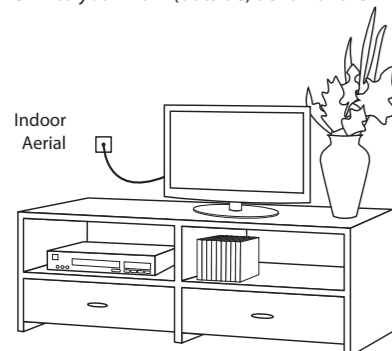


2. Once tuning has finished, set your TV channel to BBC1, then move your TV to its required location, connect the indoor aerial and switch on.

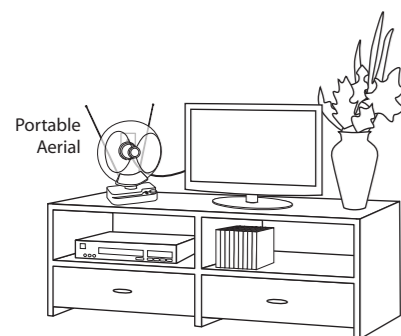



In some areas your signal strength will be weak.

3. Now adjust the alignment and position of your aerial until you get the best picture. The ideal alignment would be approximately in line with your outdoor aerial.

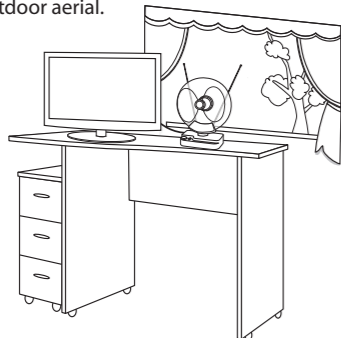

Power Up Time

There is a short delay when you power up your TV, this is normal. Check that the standby light switches from red to green, and wait for the screen to load.

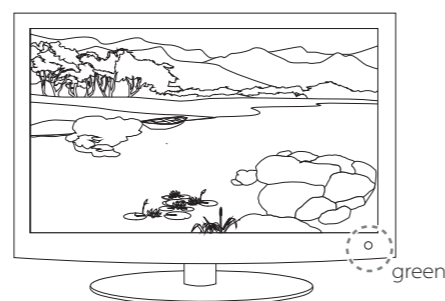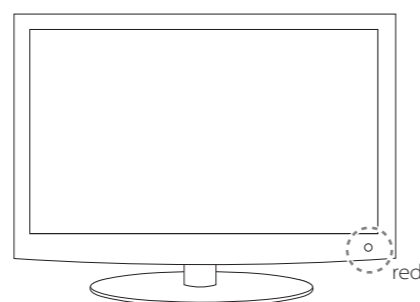

Power Saving Function

This TV is fitted with the latest eco friendly power saving technology, which will save power consumption. If you do not wish to use this functionality please follow the instruction manual (Time Setting Section). Please be aware that this functionality will cause this TV to switch off after 4 hours if no remote keys are pressed.

currys essentials

16" LED BACKLIT LCD TV AND DVD COMBI

QUICK START GUIDE
C16LDVB11

Thank you for purchasing your new Currys Essentials TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup.

Please follow this guide for a successful first time installation.



1 Unpacking

Remove all packaging from the TV. Retain the packaging. If you dispose of it please do so according to any local regulations.


- ✓ TV
- ✓ Base Stand
- ✓ Remote Control / AAA Batteries x 2
- ✓ Mains Adapter
- ✓ Screw A
- ✓ SCART Adapter Cable
- ✓ Instruction Manual
- ✓ Quick Start Guide

2 Operating Your Remote Control

1. Press and lift the back cover up to open the battery compartment of the remote control.




2. Insert two AAA size batteries. Close the battery compartment cover.

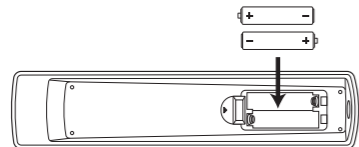

Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.


3 Installing the Base Stand

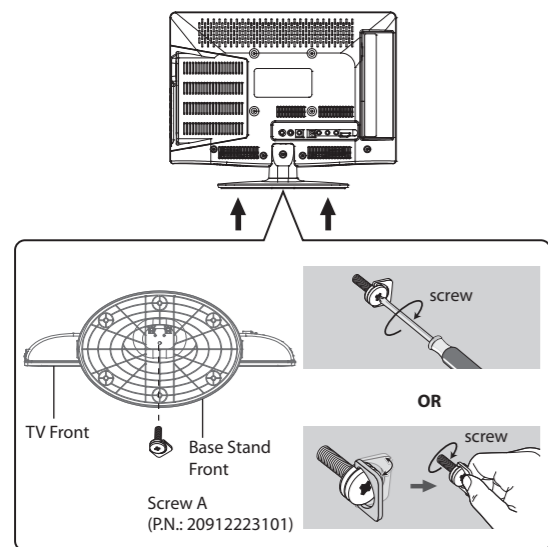

- Lay the TV down on a flat surface with the back side facing up. Please make sure a soft cushioned material (such as a pillow or thick piece of foam) is placed beneath the screen.
- To install the base stand, align the screw hole and then secure the base stand by hand or using a screwdriver with the provided 1 screw.

The screw holes will only align if the front of the base stand is at the front of the TV.


4 Connecting the Aerial

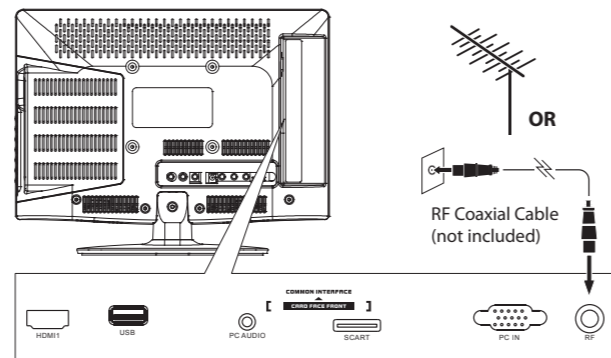

Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the RF (75Ω) socket at the rear right side of your TV.

Do not connect the TV to the mains supply until you have completed all the connections.

5 Connecting to the Mains Socket

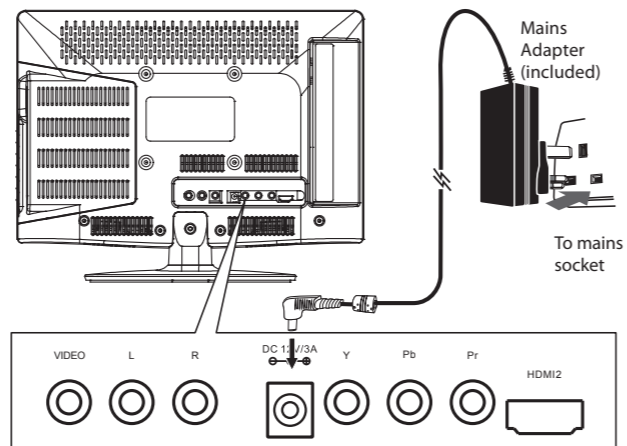


- Connect the mains adapter to the mains socket after you have completed all the connections.
- At this stage, the TV switches to standby mode. The red LED indicator will illuminate on the front panel of the TV.
- In standby mode, press the **⏻** button on the right side panel of the TV or on the remote control to turn the TV on. The red LED indicator will turn green.

6 Turning the TV On for the First Time

The first time you turn the TV on, it will go straight into **First Time Installation**.


- Press the **OK** button to start First Time Installation.

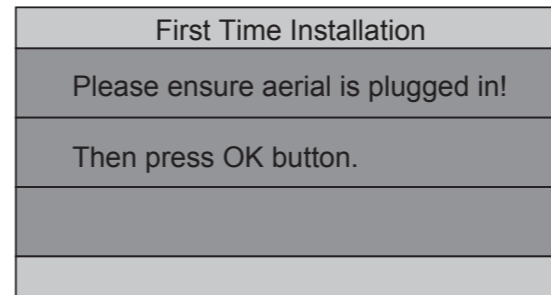


- Press the **▲◀▶▼** buttons to select **English** as your desired language to be displayed on the menu. Press the **OK** button to confirm.



- Press the **▲◀▶▼** buttons to select **UK** as the country where you will operate the TV. Press the **OK** button to confirm.

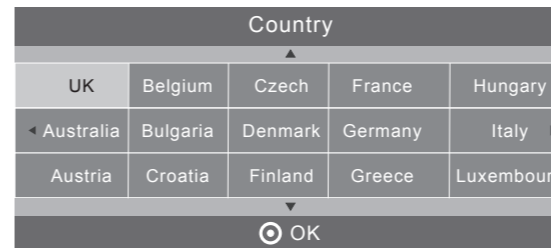

- Channel tuning will commence. This operation may take up to 6 minutes. The display will show the progress of the tuning and the number of channels found.

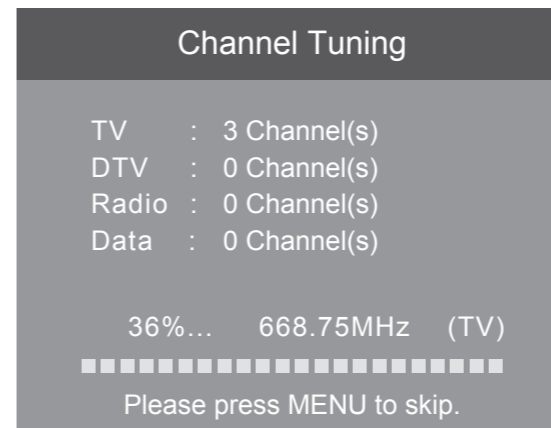


7 Target Region Descriptor

During tuning your TV may have received signals from more than one transmitter. If this has occurred the Target Region Descriptor screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

Press the **◀▶** buttons to adjust each option's setting and then press the **OK** button to confirm.

This will show the regional country (e.g. England, Wales, Scotland, NI).

This will be shown as GBR for the UK.

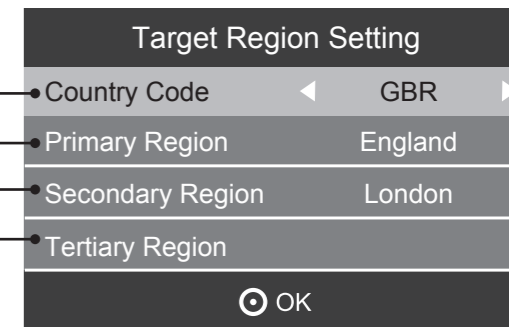

You may receive signals from more than one transmitter within the Secondary Region, (e.g. Beds and Cambs may have Luton or Sandy Heath).

This will allow you to set the region for your local news service.

Well done, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV.

If after reading the instruction manual you have additional questions related to the use of your TV please call our UK Call Centre on **0844 561 1234**. Our UK Customer Contact Centre is open Monday-Saturday 8am-8pm or Sunday 8am-6pm.