

JVC

Quick Start Guide

32" LED Smart HD TV

LT-32C650(A)

Thank you for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup. Please follow this guide for a successful first time installation.



The latest eco-friendly power-saving technology will switch off the TV if it is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

1 Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

 
- | | | |
|--|---|--|
| <input checked="" type="checkbox"/> TV | <input checked="" type="checkbox"/> Remote Control/
AAA Batteries x2 | <input checked="" type="checkbox"/> FAV Cable |
| <input checked="" type="checkbox"/> TV Stand | <input checked="" type="checkbox"/> Screws x 4 | <input checked="" type="checkbox"/> Instruction Manual |
| | | <input checked="" type="checkbox"/> Quick Start Guide |



Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.

2 Operating Your Remote Control



- Slide open the battery compartment on the back of the remote control.
- Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
- Slide the battery compartment cover back into place. Make sure it clicks into place.

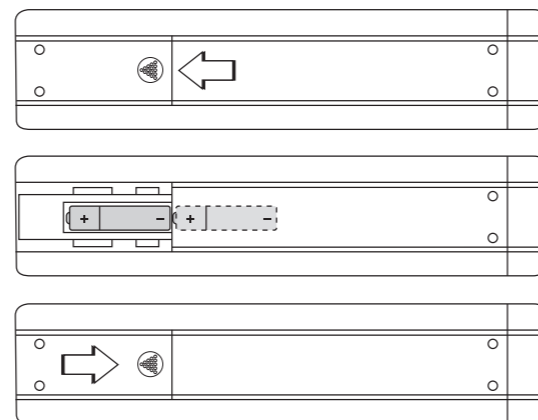

3 Installing the Base Stand

Fitting the Stand to the TV

  - Ensure the TV is switched off and not connected to the mains power supply.
- Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
- Slide the stand under the lip, the neck will fit snugly over the screw holes. Then screw the stand to the TV using the 4 screws supplied.

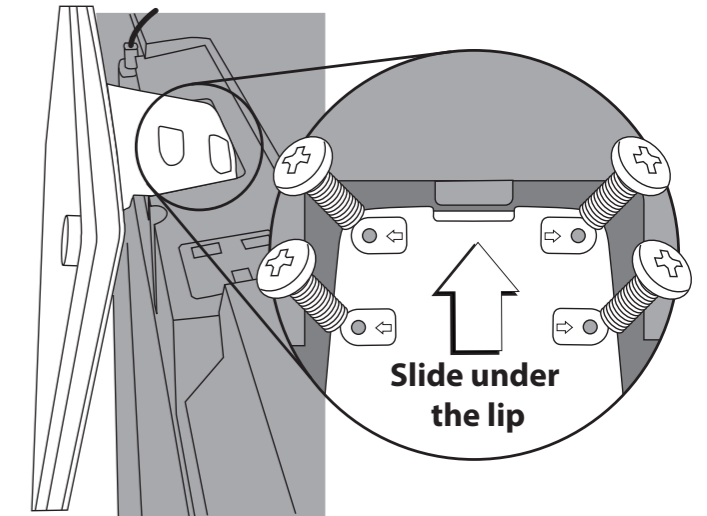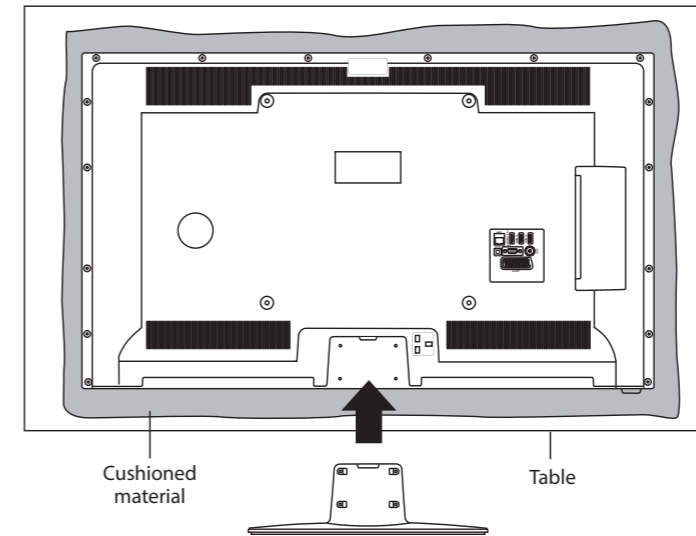


The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4 Connecting the Aerial and Turning on the TV

- Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
- Plug the TV into a mains socket and switch on at the mains.
- In standby mode, press the button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

Optional

 
If you want to connect to the internet via a wired connection then connect your ethernet cable to the **LAN** socket.

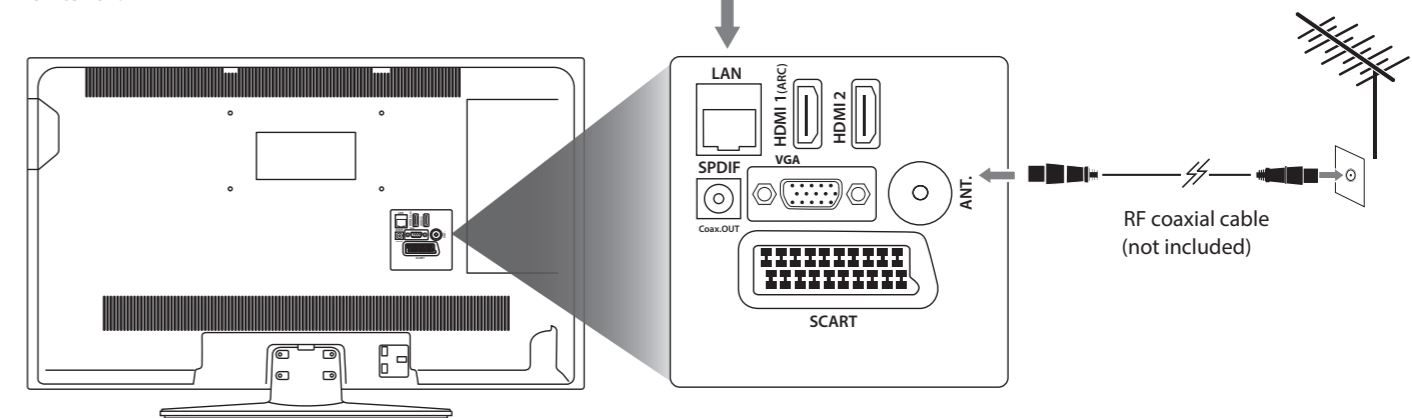

- Do not connect the TV to the mains supply until you have completed all the connections.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

5 Getting Started

 1. The first time you turn the TV on, it will go straight into the **First Time Installation** menu. Please ensure the aerial is plugged in. Press the ▲▼ buttons to highlight your language then press **OK**.


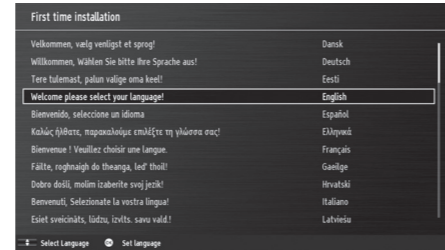


All of the setting on 'First time installations' menu are pre set for the majority of customers in the UK, if you wish you can change the setting by selecting each setting and pressing the ◀▶ buttons.

If you View TV Through a Set Top Box

If you have attached a Set top box such as **Sky/Virgin** or **BT** via a HDMI cable select Digital Aerial to **NO**. This will mean your TV will not try to tune any channels in. To view your set top box press the **SOURCE** button and select the HDMI socket you have attached your set top box to.

  2. Confirm these settings by pressing **OK**.
3. Press the ◀▶ buttons to highlight Home Mode then press **OK**.

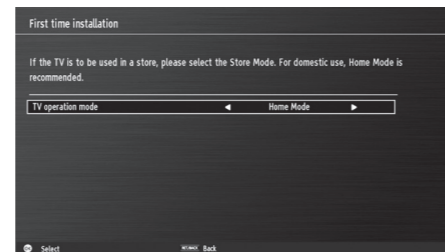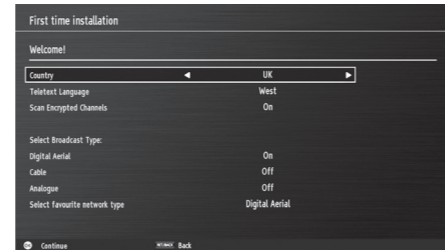


6 Connecting to the Internet

To access all the features of your Smart TV you must be connected to the internet. If you do not wish to set up your network connection you can skip this section by pressing ▶▶, however we recommend you set up your network connection now.

WIRED Connection

 
- If you have connected your ethernet cable to the **LAN** socket on the back of your TV press the ◀▶ buttons to select WIRED DEVICE. When Network says ENABLED press the **OK** button.

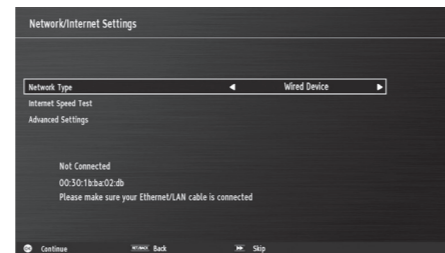

WIRELESS Connection

You can connect using a wireless connection via your router.

 
1. Press the ◀▶ buttons to select WIRELESS DEVICE. Wait a few seconds and a list of all wireless networks will be displayed.
2. Press the ▲▼ buttons to select your wireless network then press **OK**.

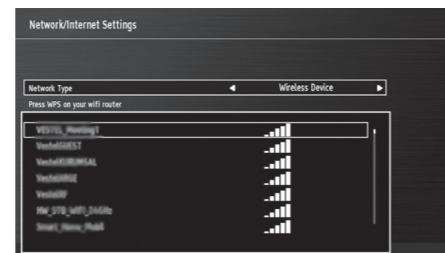

3. You now need to enter your password, a keyboard will appear. Press the ◀▶▲▼ buttons to select a letter/number/symbol and press **OK** to enter each one. Once you have typed your password highlight OK and press **OK**. The network will now show Connected.




 4. Press the **OK** button to continue.

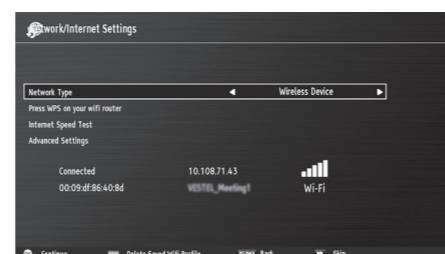

7 Tuning in Your TV

 
Your TV will now start automatic channel scan. It will tune in all available TV channels.

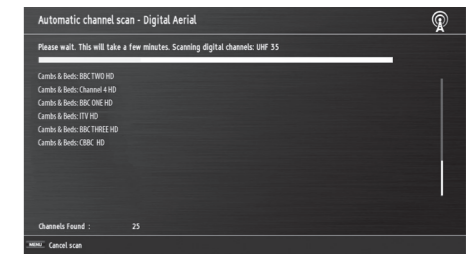

Choose Region (UK only)

During tuning, your TV may have received signals from more than one transmitter. If this has occurred the Choose Region screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

 
1. Press the ▼ button to highlight **Primary region**, then press the ◀▶ buttons to select your Primary Region e.g. England.
2. Press the ▼ button to highlight **Secondary region**, then press the ◀▶ buttons to select your Secondary Region e.g. London.
3. Press the ▼ button to highlight **Tertiary region**, then press the ◀▶ buttons to select your Tertiary Region e.g. Greater London.
4. Press the ▼ button to highlight **Save** then press **OK**.

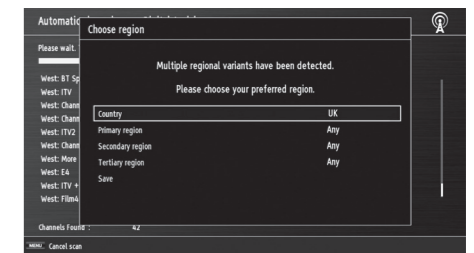

5. The Scan statistics screen will appear, showing you the amount of TV and radio stations that have been tuned in. Press **OK** to exit this screen.



 6. The Edit Channel list will appear, press the **EXIT** button to remove this. Your TV is now fully tuned in and ready to use.

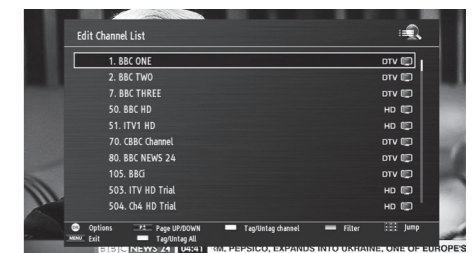

Need More Help!

If you need more help setting up your TV then please call:

UK: 0344 561 1234
Ireland: 1890 818 575

Lines are open 24/7

Well done, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV.

(QSG-LT-32C650(A)-150827V1)