

 
JVC | firetv edition

Quick Start Guide

Fire TV Edition

Smart 4K HDR LED TV

LT-40CF890, LT-49CF890(A), LT-55CF890



Thank you

 for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about **15 mins** for initial setup. Please follow this guide for a successful first time installation.



The latest eco-friendly power-saving technology will switch off the TV if it is left on and idle for 4 hours. If you wish to switch this feature off go to **SETTINGS - PREFERENCES - AUTO POWER OFF** and select **OFF**.

1

What's in the Box?

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

- | | | |
|--|---|---|
| ☒ TV | ☒ Remote Control/
AAA Batteries x2 | ☒ Base Screws (B) x 4
(16mm) |
| ☒ Stand Neck | ☒ Neck Screws (A) x 4
(16mm) | ☒ Instruction Manual |
| ☒ Stand Base | | ☒ Quick Start Guide |




Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.

2

Operating Your Remote Control

- Slide open the battery compartment on the back of the remote control.
- Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
- Slide the battery compartment cover back into place. Make sure it clicks into place.

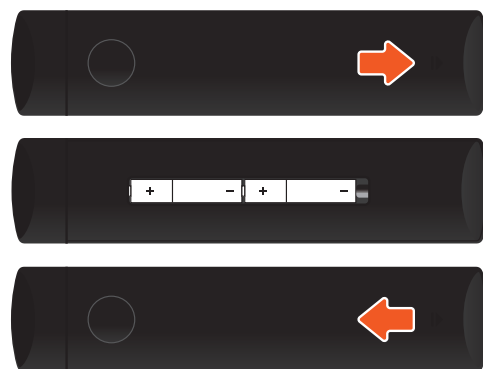

3

Installing the Base Stand

Attaching the Neck

- Ensure the TV is switched off and not connected to the mains power supply.
- Keep the protective bag on the TV to protect it. You may need to cut the protective bag before fitting the stand.
- Make sure you have some help, this requires 2 people.** Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen. Be very careful not to knock the edges of the TV, the screen is very fragile.
- Attach the neck using 4 x screws (A) x 16mm.




If you don't have a table big enough, you can use the TV box. Lie the box flat, make sure you place the polystyrene back in the box first to give the box some rigidity and strength.

Fitting the Base

- Attach the base using 4 x screws (B) x 16mm.

Be careful when attaching the base its heavy.

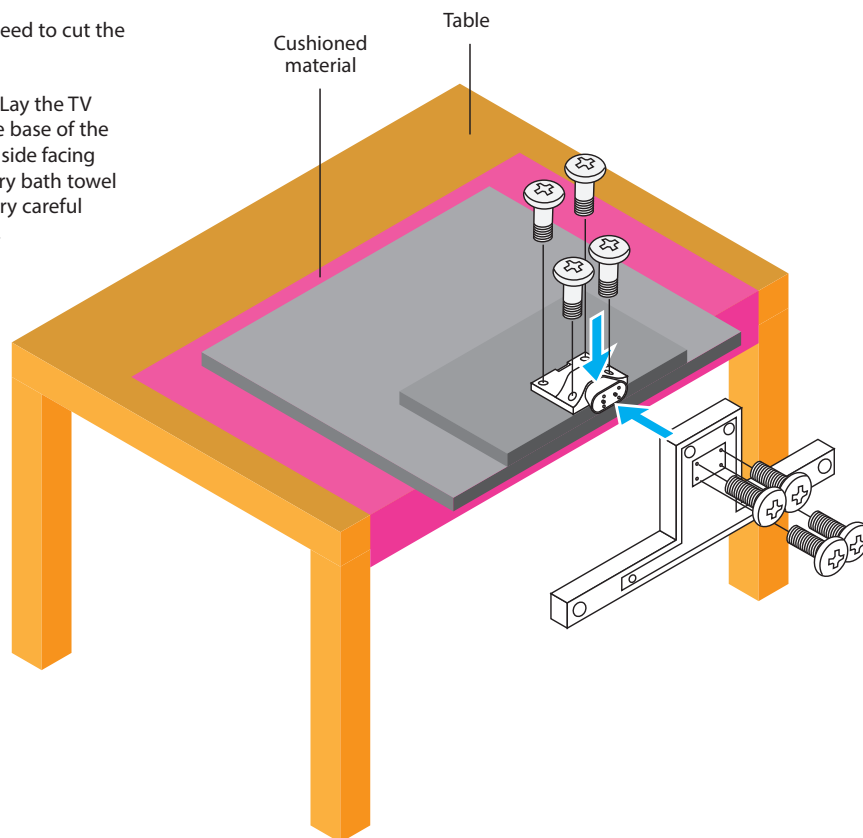


The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4

Connecting the Aerial and Turning on the TV

1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
2. Plug the TV into a mains socket and switch on at the mains.
3. In standby mode, press the  button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

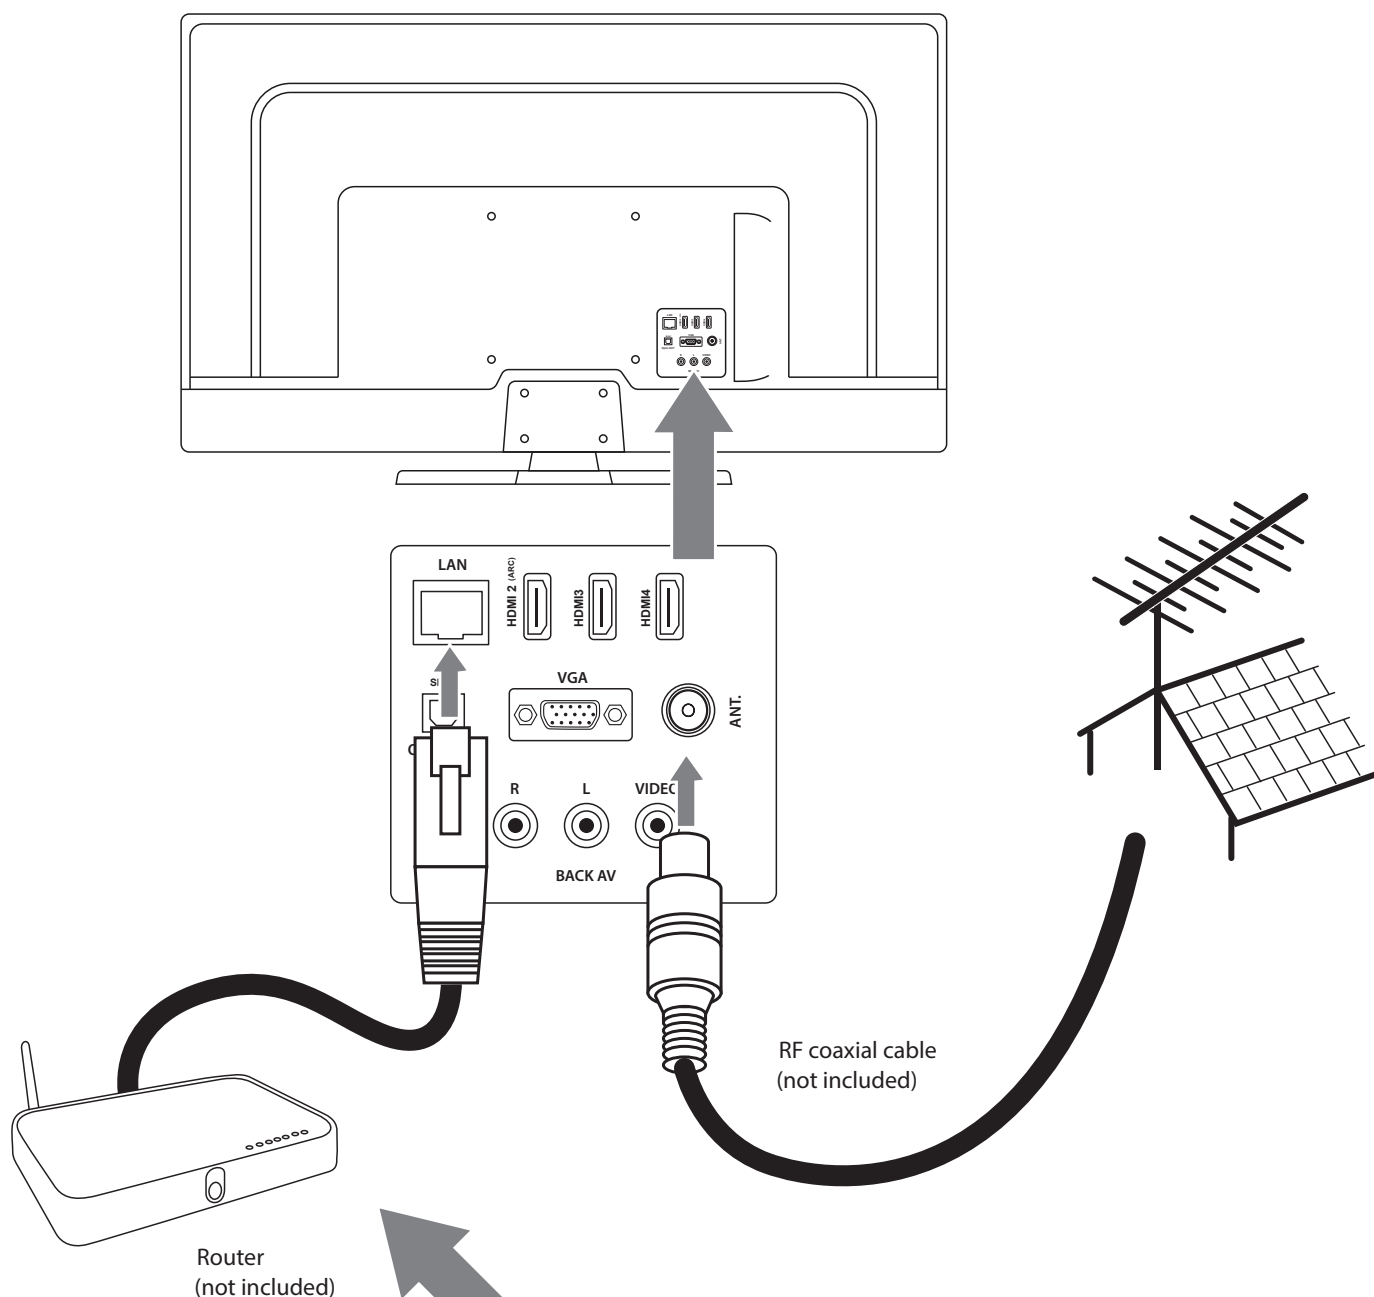

Optional

If you want to connect to the internet via a wired connection then connect your ethernet cable to the **LAN** socket.




Do not connect the TV to the mains supply until you have completed all the connections.
 Always disconnect the TV from the mains socket when not in use for a long period of time.
 The  button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power.
 To completely disconnect the mains power, please remove the mains plug from the mains socket.

5

Choosing your language

The first time you switch your TV on it will automatically be in the initial setup mode. This will guide you through the whole setup process of selecting your desired language, connecting to the internet, signing in to your Amazon account and tuning in TV channels.

1. Press the ▲▼ buttons to highlight your LANGUAGE then press the **SELECT** button.
2. Your remote control should automatically pair, but if it hasn't press and hold the **HOME** button to pair it.
3. Press the **SELECT** button to continue.

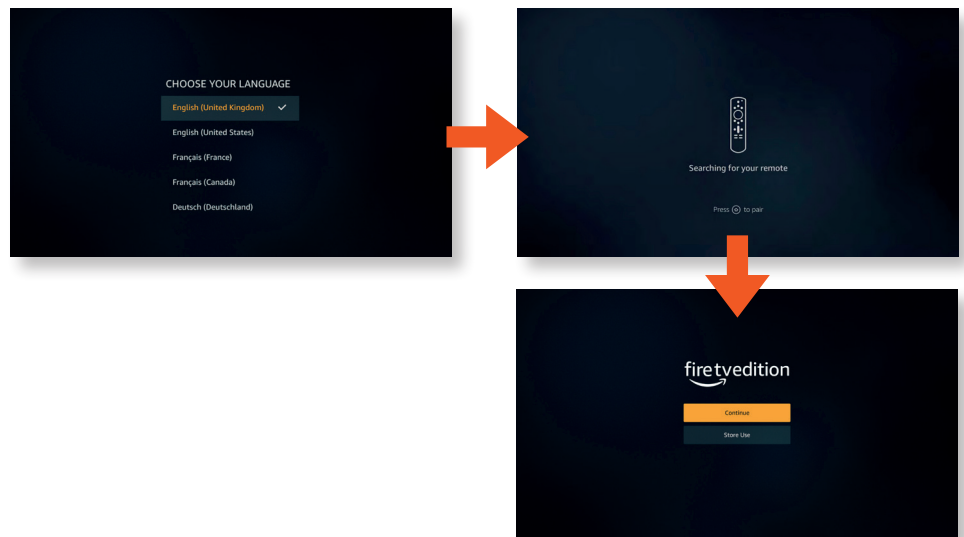

6


Connecting to the Internet - Wired, Wireless or using the WPS button

WIRED Connection


- If you have connected your ethernet cable to the **LAN** socket on the back of your TV, your TV will automatically connect to the internet. You'll now be asked to sign in to your Amazon account, go to section 7.

WIRELESS Connection


You can connect using a wireless connection via your router.

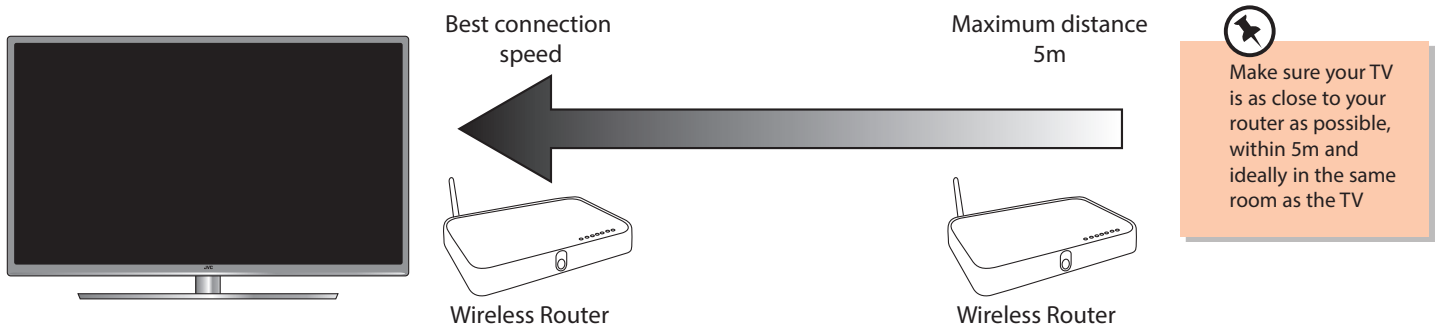

1. Your TV will automatically scan for your wireless network, then show you a list of networks that its found. Highlight your network and press the **SELECT** button.

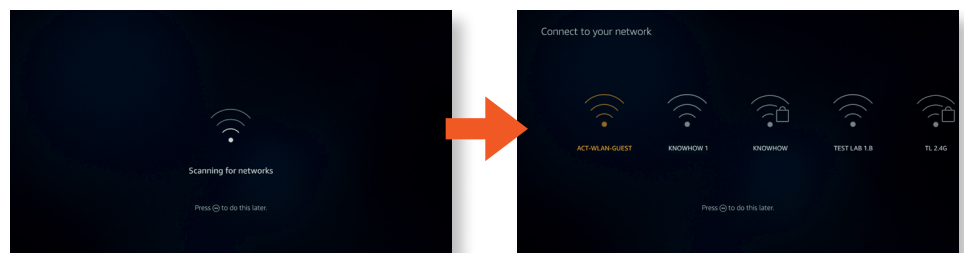


2. Enter your Wi-Fi password, then highlight Connect and press the **SELECT** button. In a second or two your TV will show Connection Successful.

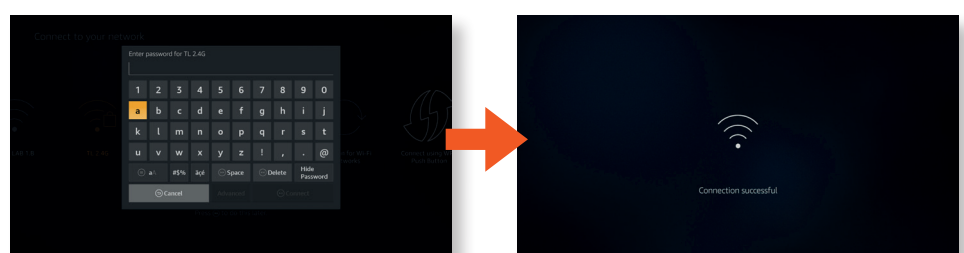

WPS Connection - Button

Rather than having to enter your Wireless password, you can select the WPS (BUTTON) option. This will allow you to connect to your router without a password once the WPS button is pressed on your router.


1. Highlight 'Connect using WPS Push Button' and press **SELECT**.
2. Now press the WPS button on your router and your TV will connect to your router, without the use of a password.

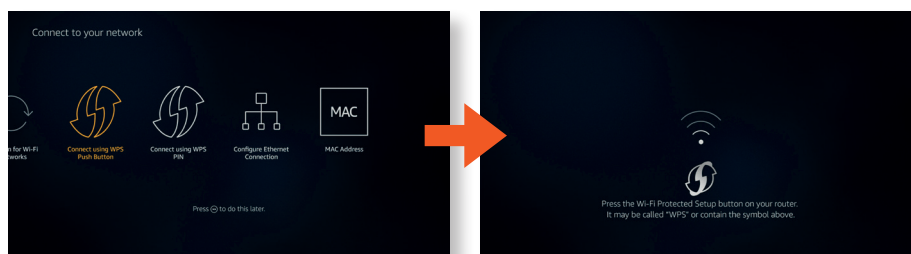

WPS Connection - Pin Code

Rather than having to enter your Wireless password, you can select the WPS (PIN) option. This will allow you to connect to your router without a password once the WPS button is pressed on your router.

1. Highlight 'Connect using WPS PIN' and press **SELECT**.
2. You'll see a code on your screen, enter this code into your router. It may take a minute or two to connect.

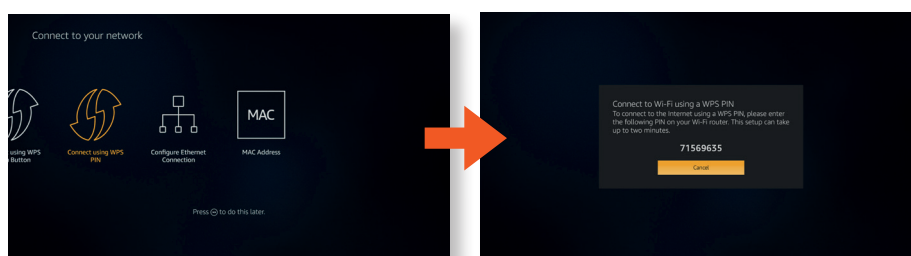

7


Sign in to your Amazon account

You will now be asked to sign in to your Amazon account, if you don't already have an account you can set one up on your TV. For more instructions of how to setup an account refer to your Instruction Manual where you will be shown how to set one up on your TV or you can go to amazon.co.uk/account on another device.


1. With 'I already have an Amazon account' highlighted press the **SELECT** button.
2. Enter the email address that you use with your Amazon account, then highlight NEXT and press **SELECT**.
3. Enter your Amazon Account Password, then highlight NEXT and press **SELECT**.
4. Press **SELECT** to continue.



3. Enter your Amazon Account Password, then highlight NEXT and press **SELECT**.
4. Press **SELECT** to continue.

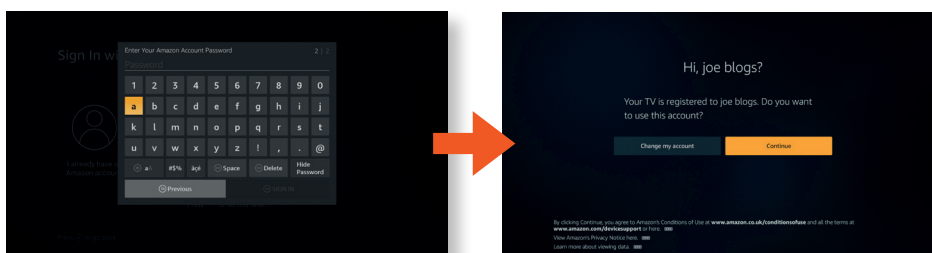


5. If you would like to save your Wi-Fi password to your Amazon account with YES highlighted press **SELECT**. If you don't want to save your Wi-Fi password to your account highlight NO and press **SELECT**.
6. If you want to enable Parental Controls you can at this point or you can do it later. For detailed instructions on enabling parental controls see your instruction manual. Press the **SELECT** button.

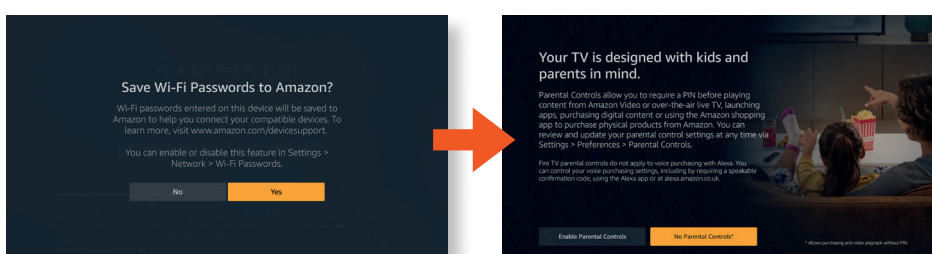


Select popular apps to download

You can now select all the popular apps that you'd like to download, once selected they will download in the background while your TV is tuning in. You'll find 4 categories to choose from. More apps are available once you've setup your TV, so you can skip this stage if you like.


1. Highlight 'CHOOSE APPS' and press **SELECT**.

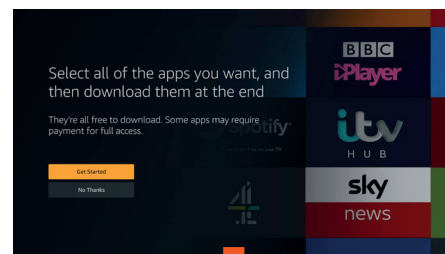


2. Highlight the app(s) that you'd like to download from the 'POPULAR SERVICES' section using the **NAVIGATION** buttons and press the **SELECT** button to tick the app(s).
3. Press the **NAVIGATION** button to move to 'POPULAR NEWS SERVICES'.

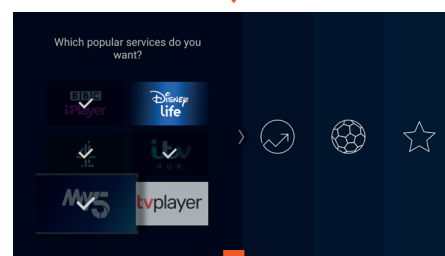


4. Highlight the app(s) that you'd like to download from the 'POPULAR NEWS SERVICES' section using the **NAVIGATION** buttons and press the **SELECT** button to tick the app(s).
5. Press the **NAVIGATION** button to move to 'SPORTS SERVICES'.

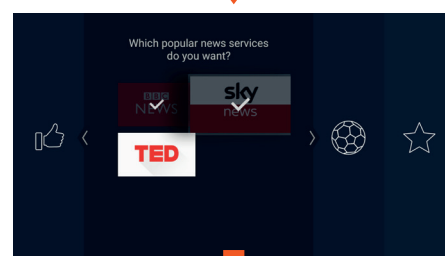


6. Highlight the app(s) that you'd like to download from the 'SPORTS SERVICES' section using the **NAVIGATION** buttons and press the **SELECT** button to tick the app(s).
7. Press the **NAVIGATION** button to move to 'FEATURED SERVICES'.

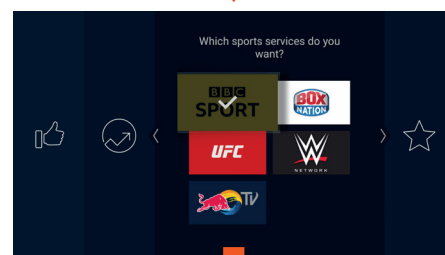

8. Highlight the app(s) that you'd like to download from the 'FEATURED SERVICES' section using the **NAVIGATION** buttons and press the **SELECT** button to tick the app(s).
9. Press the **PLAY/PAUSE** button, once you've ticked all the apps you'd like to download.

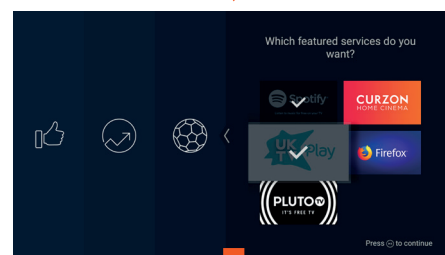

10. A list of your selected apps will appear, press **SELECT** to finish the process. These apps will not start to download while you tune in your TV.

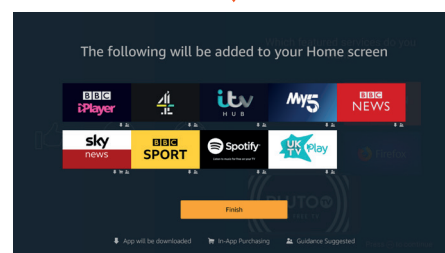

1. To tune in your TV, highlight YES and press **SELECT**.



If you View TV Through a Set Top Box

If you have attached a Set top box such as **Sky/Virgin** or **BT** via a HDMI cable then highlight NO and press SELECT. This will mean your TV will not try to tune any channels in and will go straight to the Home page. To view your set top box select the Input that you have connected it to.

2. Make sure your aerial is connected then press **SELECT**.








3. Select your Country then press **SELECT**.

4. Select AIR - AUTO SCAN then press **SELECT**.

5. Your TV will now start scanning for all the available TV channels.

6. Once the Scan is complete you will see the number of TV channels found, press **SELECT**.

7. Your TV is now setup and ready to watch.

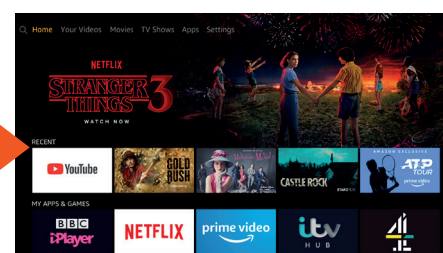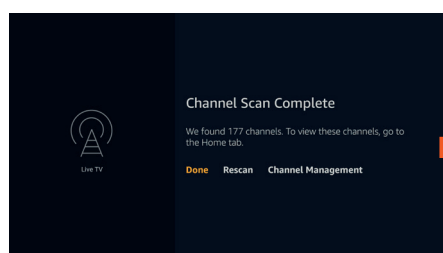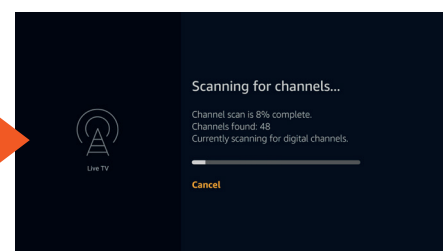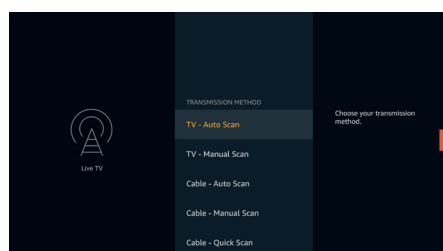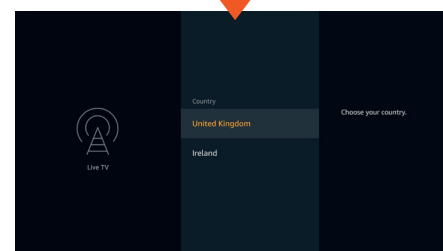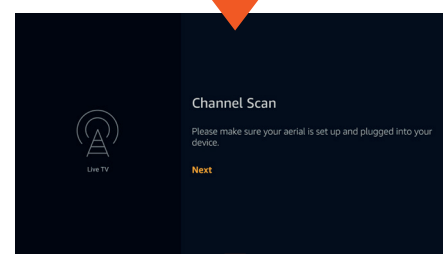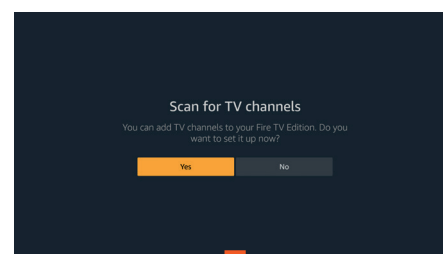

JVC Voice Remote with Alexa

- 1. Microphone**
Speak into the microphone when using Alexa.
- 2. Alexa LED**
 - Turquoise LED lights when you press and hold the Alexa Button.
 - Blue LED flashes while Alexa responds.
 - Red LED will light to show low batteries.
- 3. STANDBY Button**
Press to switch between on and standby.
- 4. Alexa Button**
Press and hold when talking to Alexa.
- 5. NAVIGATION (▲) button**
Press to navigate up.
- 6. SELECT Button**
Press to select items in menus.
- 7. NAVIGATION (◀) button**
Press to navigate left.
- 8. NAVIGATION (▶) button**
Press to navigate right.
- 9. NAVIGATION (▼) button**
Press to navigate down.
- 10. HOME Button**
 - Press to view the home screen.
 - Press and hold while watching LIVE TV to access the LIVE TV menu.
- 11. BACK Button**
Press the move back through menus.
- 12. OPTION Button**
Press to view more options on your selected item.
- 13. PLAY/PAUSE**
Press the play or pause videos.
- 14. REWIND Button**
Press to rewind videos.
- 15. FAST FORWARD button**
Press to fast forward videos.
- 16. GUIDE Button**
Press to view the Live TV Programme Guide.

- 17. VOLUME +/- buttons**
Press to increase and decrease the volume level.
- 18. CHANNEL ▲▼ buttons**
 - Press to scroll up and down the channel list.
- 19. MUTE**
Press to mute or un-mute the volume.
- 20. NUMBER Buttons**
Press to select a Live TV channel.
- 21. SUBTITLE Button**
Press to access the AUDIO menu where you can switch Audio Description and Subtitles on and off.
- 22. TEXT Button**
Press to enter interactive services if available.
- 23. PRIME VIDEO Button**
Press to enter Prime Video (internet connection required).
- 24. NETFLIX Button**
Connects to Netflix for viewing online TV shows and films (internet connection required).
- 25. LIVE TV Button**
Press to watch live TV.
- 26. APPS Button**
Press to access 'Your Apps & Channels'.
- 27. COLOURED Buttons**
 - Press the RED button to access Red button services if available.
 - Access the TELETEXT items (LIVE TV mode).



- Pressing the **STANDBY, HOME, SELECT, ALEXA, PRIME VIDEO, NETFLIX, LIVE TV, and APPS** buttons will turn the TV on from standby.
- Your remote control should automatically pair to your TV, but if it didn't press and hold down **BACK, OPTION** and **◀** (press 3 buttons at the same time) for **10 seconds** and it will pair.



Need More Help?

If you need more help setting up your TV then please call:

UK: 0344 561 1234
Ireland: 1890 818 575

Lines are open 24/7

(QSG-LT-40CF890/LT-49CF890(A)/LT-55CF890_191113V2)