

JVC

Instruction Manual

Megasound Hi-Fi System

MX-DN550



Contents

Safety Warnings	4
Unpacking	6
Product Overview	7
Main Unit.....	7
Remote Control	8
Preparation	9
Battery Replacement for the Remote Control	9
Remote Control Operation Range.....	10
Connections	11
Connecting the FM Aerial.....	11
Speaker Connections	11
Connecting an Mobile Devices.....	12
Using Earphones	12
Connecting to the Mains Supply	13
Basic Operating	14
Switching ON / OFF	14
ECO-Power Mode.....	14
Selecting Modes.....	14
Adjust the Speaker Level Settings and Effects	15
Clock Operation	16
Manually Setting the Clock.....	16
Time Display	16
FM Radio Operation	17
Tuning in a Station.....	17
Presetting Stations	17
Recalling Preset Stations.....	17
CD/MP3 Operation	18
Compatible Disc Types	18
Playback.....	18
To Skip Search or Search and Play	18
Selecting an Album (MP3)	18
Repeat Playback	19
Programme Play.....	19
Using the USB	20
LINE IN (AUX IN) Operation	20
Bluetooth® Operation	21
Maintenance	22
Cleaning the Unit.....	22
Handling Discs	22
Cleaning Discs.....	22
Storing Discs	22
Hints and Tips	23
Product Fiche and Specifications	25
Useful Information and Licences	26

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Thank you for purchasing your new JVC Hi-Fi System.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

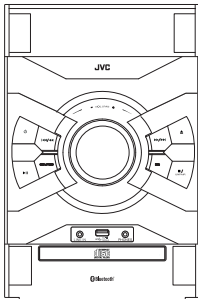

Main Unit

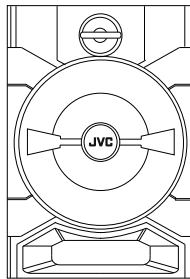


Speakers x 2

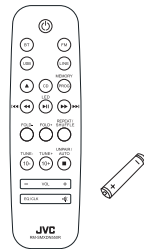


Remote Control /
AAA Battery



 FM Aerial



Instruction Manual

 

Quick Start Guide




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Center on **1 890 818 575**.

Product Overview


Main Unit

Front View

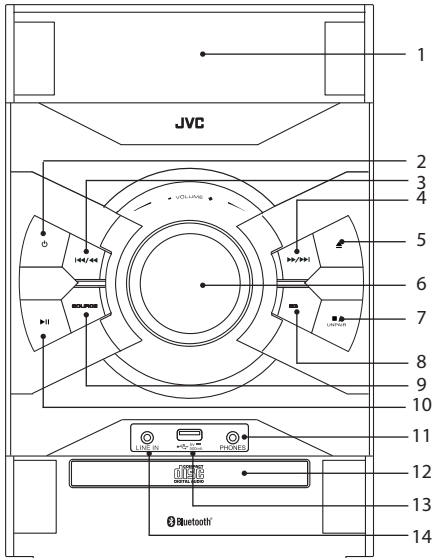

1. Display
2. **Standby** Button
3. **Previous** Button
4. **Next** Button
5. **Open / Close** Button
6. **VOLUME - / +** Dial
7. **Stop / PAUSE** Button
8. **EQ** Button
9. **SOURCE** button
10. **Play/Pause** Button
11. **PHONE** Socket
12. Disc Tray
13. **5V 500mA** USB Socket
14. **LINE IN (AUX IN)** Socket


Rear View

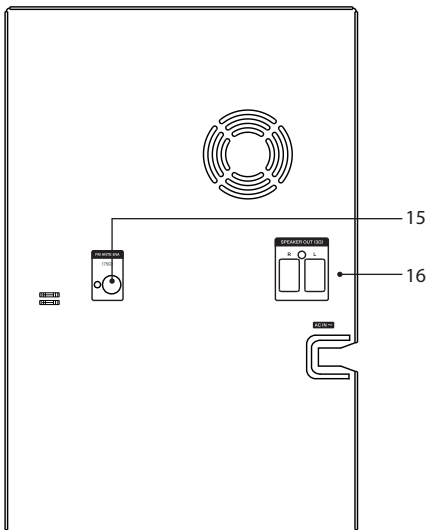

15. **FM ANTENNA** Socket.
16. **SPEAKER OUT (L/R)** Sockets

Remote Control


1. Standby Button
2. **BT** Bluetooth® Button
3. **USB** Button
4. Open/Close Button
5. **MEMORY** Button
6. **FOLD-**/**FOLD+** Buttons
7. **TUNE-**/**TUNE+** Buttons
8. **VOL +**/**-** Buttons
9. **EQ/CLK** Button
10. **FM** Button
11. **LINE** Button
12. **CD** Button
13. **PROG/MEMORY** Button
14. **LED/II** Button
15. **REPEAT / SHUFFLE** Button
16. **10-**/**10+** Buttons
17. **UNPAIR / AUTO** Button
18. Mute Button

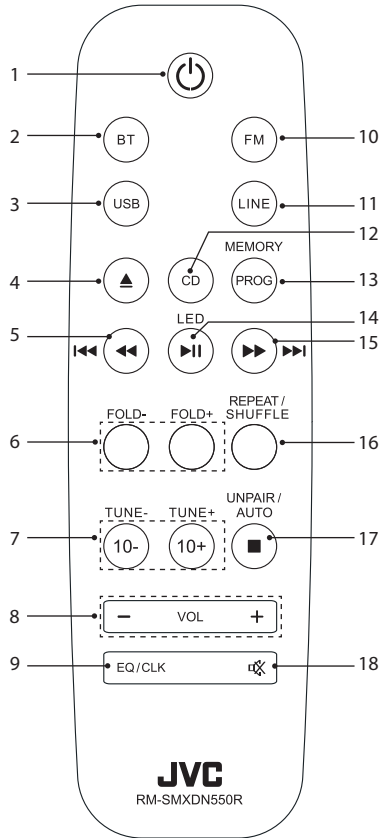


Preparation

Battery Replacement for the Remote Control

1. Press and hold the **▲** button at the back of the remote control to open the back cover.

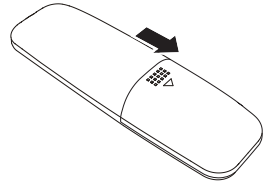


2. Insert the AAA battery with correct polarity (+/-) as indicated.

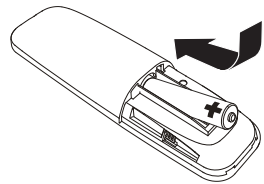

3. Replace the back cover.



Ensure the back cover is in right position. Incorrect installation will damage the rib of the remote control.

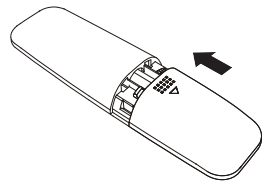

Handling the Battery


- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.
- Do not expose the batteries to excessive heat such as sunshine, fire or the like.

Handling the Remote Control

- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Remote Control Operation Range

- Point the remote control to the unit no more than 6 meters from the remote control sensor and within 60° horizontally and 20° vertically of the front of the unit.
- Please note that the operating distance may vary depending on the brightness of the room.

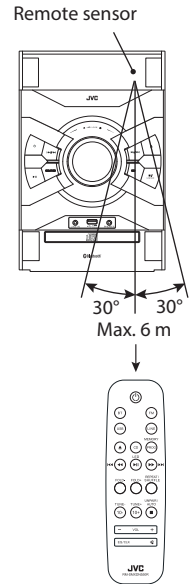


- Make sure that there is no obstacle between the infrared remote sensor of the unit and remote control. If you install the unit on rack, etc., the remote controllable range may decrease depending on the thickness or colour of glass door of rack.
- Do not expose the infrared remote sensor to direct sunlight or other strong light, such as inverter fluorescent light.

Connections

Connecting the FM Aerial

Fully extend the FM aerial. Connect the supplied FM aerial to the **FM ANTENNA** socket on the rear of the unit.

Rear View of the Main Unit

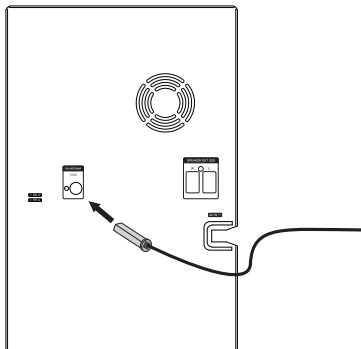


- Do not overtighten, this could damage the aerial.
- To avoid noise, keep aerial away from the unit, the connecting cables and the mains cable.


Speaker Connections

1. Connect the speaker cables between the terminals as shown below.
2. Connect the speaker cables with white head to the **SPEAKER OUT (3Ω) L** socket and cable with a red head to the **SPEAKER OUT (3Ω) R** socket.


Rear View of the Right Speaker

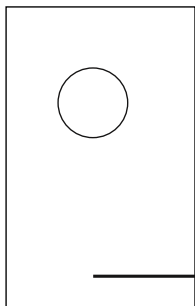

Rear View of the Main Unit

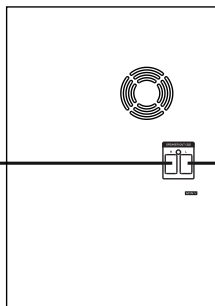


Rear View of the Left Speaker

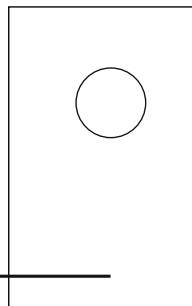

Connect the speaker cable to the wrong terminal will cause the sound out of phase.


Connecting an Mobile Devices

Connect the **LINE IN** (AUX IN) socket on the front of the main unit to the headphone jack on an mobile device with an 3.5mm to 3.5mm stereo audio cable illustrated below.

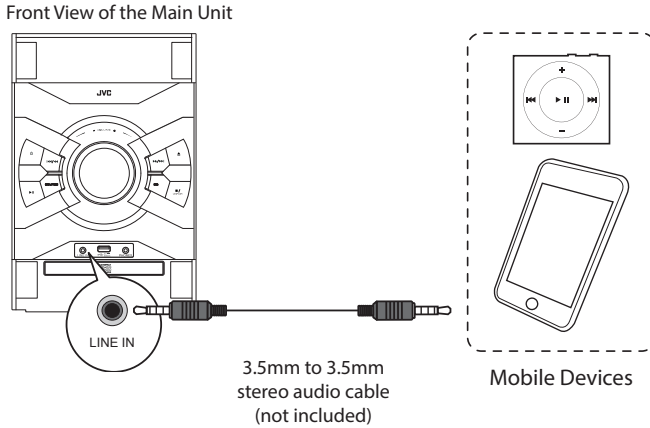

Using Earphones

Turn down the volume before connecting the earphones. Slowly raise the volume with the earphones on until you reach your desired volume. When earphones are connected, the speakers automatically mutes.

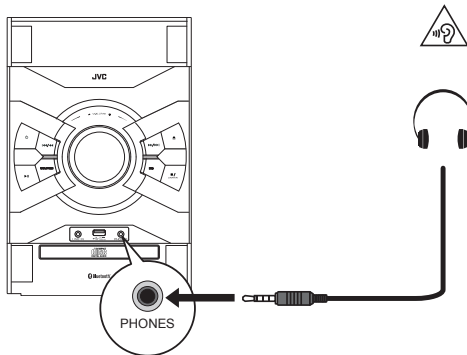


Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods.

Connecting to the Mains Supply



- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Make sure the mains plug is firmly inserted into the mains socket.
- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.
- Use the mains cable as the disconnect device. The disconnect device shall remain readily operable.

Unwind the mains adapter cable to its full length. Connect the **AC** socket at the rear of the main unit to mains plug to the mains socket.

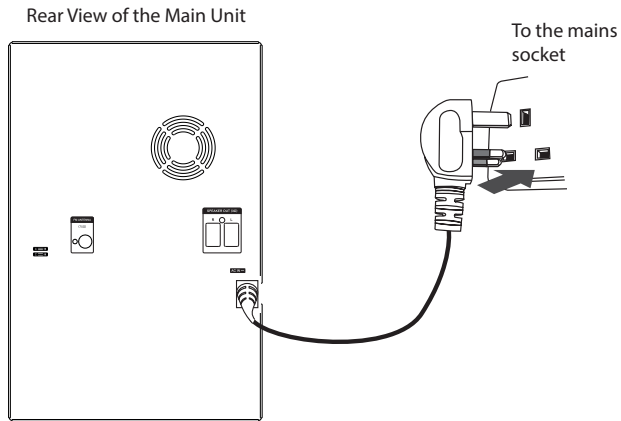





This instruction manual explains the basic instructions for operating this unit. Unless otherwise stated, all operations described are based on remote control use.

Basic Operating

Switching ON / OFF

When you first connect the unit to the AC power, the unit will be in **Standby** mode. The **STANDBY** indicator will light up red.

- Press  on the unit or remote control to switch the unit on. The display will show “HELLO” and the **STANDBY** indicator will switch off. Then, the system will switch to the last selected source.
- Press  on the unit or remote control to switch the unit back to standby mode. The display will show “GOODBYE” and the standby indicator will light up red. The clock will be displayed for a few minutes then the clock will switch off. The unit will switch to ECO-Power mode.



- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

ECO-Power Mode

The unit features an ECO-Power / Standby mode. It automatically turns to **Standby** mode after 15 minutes if the unit is idle in **BT**, **LINE IN**, **AUDIO**, **CD** or **USB** mode or the external unit is disconnected, switched off or the volume is too close to mute.

Selecting Modes

Turn the **SOURCE** button on the unit to switch between **LINE IN**, **TUNER**, **DISC**, **USB** and **BT** (*Bluetooth*[®]) modes. The selected mode will show on the display.



Alternatively, you can directly press the followings buttons on the remote control to switch to your desired mode:



- **BT** to switch to *Bluetooth*[®] mode.
- **CD** to switch to **DISC** mode.
- **USB** to switch to **USB** mode.
- **LINE** to switch to **LINE IN** mode.
- **FM** repeatedly to switch between **FM** radio.

Adjust the Speaker Level Settings and Effects

Adjusting the Volume

To increase or decrease the volume, turn the – **VOLUME** + dial on the unit or press the **VOL +/-** buttons on the remote control.

Mute Sound

If you wish to turn the sound off, press  button. Press  button again, or press **VOL +/-** to resume normal listening.

Preset Equalizer

You can adjust the sound reproduced simply by choosing from 5 preset equalizers.

During play, press the **EQ** button on the remote control repeatedly to select: **FLAT / ROCK / POP / CLASSIC / JAZZ**.

Clock Operation

Manually Setting the Clock

Manual setting the clock can only be done in **Standby** mode.

1. In **Standby** mode, press and hold **CLK** button.
2. Press **◀◀/▶▶** or **▶▶/▶▶** button to set the 12/24 hour format.
3. Press the **CLK** button, hour indicator will blink.
4. Press **◀◀/▶▶** or **▶▶/▶▶** button to set the hour.
5. Press the **CLK** button, minute indicator will blink.
6. Press **◀◀/▶▶** or **▶▶/▶▶** button to set the minute.
7. Press the **CLK** button to confirm.



- To exit timer setting mode without storing, press the **■** button.
- If no button is pressed in approx 90 seconds, the unit exits clock setting mode automatically.
- If a power failure occurs or the unit is disconnected from the mains, the clock setting will be lost.

Time Display

While the unit is on, press **CLK** button to display the clock for few seconds.

FM Radio Operation



- Make sure that you have correctly connected and fully extended the antenna.
- The search may not stop at a station with a very weak signal.
- If reception is still poor, try to adjust the FM aerial location.

Turn **SOURCE** button repeatedly on the unit or press **FM** button on the remote control to select the tuner source. The word “**TUNER**” will be showed on the display.

Tuning in a Station

Auto Tuning

Press and hold **UNPAIR/AUTO** ■ button on the remote control to start auto tuning. Press **UNPAIR/AUTO** ■ button again to stop the auto tuning.



The search may not stop at a station with a very weak signal.

Manual Tuning

Press and hold **◀◀/▶▶** or **▶▶/▶▶** button on the unit or **TUNE+** or **TUNE-** on the remote control to start the forward or reverse scanning. The display will show the frequency being searched. Once a station has been found, the scanning will stop automatically. to change the frequency until you find the station you want.



With FM radio it may be necessary to fine tune each station by pressing **TUNE+** or **TUNE-** button repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

Presetting Stations

You can store up to 30 of your favourite stations to the memory. This will enable you to access your favourite stations quickly and easily.

Automatically

Press and hold **UNPAIR/AUTO** ■ button on the remote control for a few seconds. The unit will automatically search and store the first 30 radio stations it finds.

Manually




1. Tune into a desired radio station as shown above.
2. Press **MEMORY/PROG** button to activate program mode. The preset number will flash in the display.
3. Press **◀◀/▶▶** or **▶▶/▶▶** button on the unit or remote control to select the programme position number (1-30).
4. Press **MEMORY/PROG** button again to store the station.

Recalling Preset Stations

Press **◀◀/▶▶** or **▶▶/▶▶** button on the unit or remote control to select the preset station.

CD/MP3 Operation

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable - Audio/MP3)		AUDIO / MP3
CD-RW (CD-Rewritable - Audio/MP3)		AUDIO / MP3
AUDIO-CD (Compact Disc Digital Audio)		AUDIO



- Some recorded files may not be able to be played due to the type and format of disc or condition of the recording.
- If you are having trouble playing a certain disc, it is recommended to use USB input instead for best MP3 playback.

Turn **SOURCE** button on the unit repeatedly or press **CD** button on the remote control to select the **DISC** source. The word "**DISC**" will be showed on the display.

Playback

1. In **DISC** mode, press **▲** button on the unit to open the disc tray.
2. Place the disc with the label side up into the CD compartment, and then press the **▲** button on the unit to close the tray.
3. After closing the disc tray, the unit will read the disc and play it automatically.



- If there is no disc or the disc can't be read, "**NO DISC**" will show on the display.
- If in stop mode, please press the **▶||** button to start playing the disc.
- After the disc tray is open for 30 seconds, it will close automatically.

4. Press **▶||** to pause the playback, the time elapsed indicator will flash. To resume playback, press **▶||** again.
5. Press **■** to stop the disc playing. Press **▲** button if you want to remove the disc.

To Skip Search or Search and Play

- Press **◀◀** once or more to skip to beginning of the current track or the previous track.
- Press **▶▶** once or more to skip forward to the next track.
- Press and hold **◀◀** / **▶▶** to search for the position that you intend to start playing. Release to resume normal playback.

Selecting an Album (for MP3 disc)

- Press **FOLD-/FOLD+** to select an album when playing an MP3 CD.
- Press **FOLD-/FOLD+** to select the next/previous album, and play the first track of this album.

Repeat Playback

ONE and ALL Repeat Play

- **CD Disc**

Press the **REPEAT/SHUFFLE** button repeatedly to set the function.

First press : To repeat the same track, the display will show "**REP ONE**".

Second press : To repeat playing all tracks on a disc, the display will show "**REP ALL**".

Third press : To play tracks randomly, the display will show "**SHUFFLE**".

After all the tracks have been played once, the playback will stop automatically.

Fourth press : To cancel the repeat playing, the display will show "**OFF**".

MP3 Disc

Press the **REPEAT/SHUFFLE** button repeatedly to set the function.

First press : To repeat the same track, the display will show "**REP ONE**".

Second press : To repeat playing album, the display will show "**REP ALB**".

Third press : To repeat playing all tracks on a disc, the display "**REP ALL**" will stay lit.

Fourth press : To play tracks randomly, the display will show "**SHUFFLE**".

Fifth press : To cancel the repeat playing, the display will show "**OFF**".

Programme Play

You can programme up to 20 tracks to play in any desired order.


1. Make sure the disc is inserted and in **STOP** mode.
2. Press **MEMORY/PROG** button to enter the programme mode. The display will show "**01 Pr 01**" and "**PROG**".
3. Press **FOLD+/FOLD-** button to select desired folder (for **MP3 disc** or **USB**).
4. Press **◀/◀◀** or **▶▶/▶** to select the desired track number.
5. Press **MEMORY/PROG** button to store.
6. Repeat steps 3-4 to programme more tracks.
7. Once it is completed, press the **▶||** button to start programme play.
8. Press **■** once to stop the programme play. Press **■** twice to clear programme.




Open the CD tray and close it again will cancel the program and erase the memory.

Using the USB

By connecting a USB mass storage device (including USB flash memory, USB flash players or memory cards) to this unit, you can enjoy the device's stored music through the unit.

1. Insert the USB device's USB plug into the  **5V 500mA** socket at the front of unit.
2. Turn **SOURCE** button on the unit or repeatedly press **USB** on the remote control to select the **USB** source. The word "**USB**" will be showed on the display.
3. Press **FOLD+ / FOLD-** button to select next/previous album, and play the first track.
4. Other playback features are the same as if you were playing an CD.

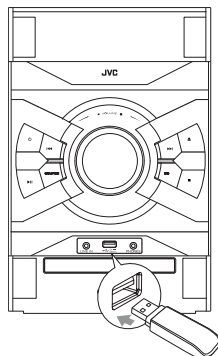

- The player supports the USB music file format of MP3 only.
- If your USB device is loaded with MP3 files but the display keeps showing '**NO SONG**' on the display, the format of your USB device might not be compatible with the unit.
- The unit can support USB devices with up to 16 GB of memory.
- The unit may not be compatible with all USB devices, this is not an indication of a problem with the unit.

LINE IN (AUX IN) Operation

1. While in **ON** mode, turn **SOURCE** button on the unit or repeatedly press **LINE** on the remote control to select the **LINE IN** source. The words "**LINE IN**" will be shown on the display.
2. Operate your audio device directly for playback features.
3. Turn the **- VOLUME +** dial on the unit or press the **VOL +/-** buttons on the remote control to adjust the volume to your desired level.

Bluetooth® Operation

Pairing the unit with a *Bluetooth*® device to listen to music:

1. Turn the **SOURCE** button on the unit or directly press the **BT** button on the remote control to select the *Bluetooth*® mode. The word "**BT**" will be showed on the display and the *Bluetooth*® indicator will blink.
2. Activate your *Bluetooth*® device and select the search mode. "**MX-DN550**" will appear on your *Bluetooth*® device list.
3. Select "**MX-DN550**" and enter "**0000**" for the password if necessary. If connect successful, the *Bluetooth*® indicator will light up blue and the unit will make a beep sound.
4. To disconnect the *Bluetooth*® function,
 - Switch to another function on the unit or disable the function from your *Bluetooth*® device. The unit will make a beep sound.
 - Press and hold **UNPAIR/AUTO** ■ button on the remote control. The unit will make a beep sound.

If your *Bluetooth*® device supports A2DP, play music via your device.

If your *Bluetooth*® device supports AVRCP, use supplied remote control to control play.

- To pause / resume playback, press **▶||**.
- To skip to a track, press **◀◀/▶▶** or **▶▶/▶▶**.
- Turn the **- VOLUME +** dial on the unit or press the **VOL +/-** buttons on the remote control to increase or decrease the volume.



- The operational range between the unit and the device is approximately 10 metres.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the device's capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- If no other *Bluetooth*® devices pairs with this unit within 2 minutes, the unit will recover to its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.

Maintenance

Cleaning the Unit



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.


Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.



Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.

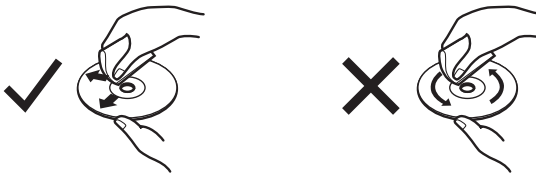

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs



- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

- For UK, please call our UK Call Centre on **0344 561 1234**.
- For Ireland, please call our Ireland Call Center on **1 890 818 575**.

General

Problem	Solution
No power.	<ul style="list-style-type: none">• Ensure the mains plug is connected.• Make sure that you select the ON mode.
The remote control is not function.	<ul style="list-style-type: none">• Use the remote control near the unit.• Point the remote control at the remote sensor on the unit.• Replace the battery in the remote control with a new one.• Remove any obstacles between the remote control and the unit.
No sound from the unit.	Please try either one of the solutions below: <ul style="list-style-type: none">• Make sure that the unit is not muted. Press the  or the VOL +/- on the remote control, or turn the - VOLUME + dial on the unit to resume normal listening.• Press  on the unit or on the remote control to switch the unit to standby mode. Then press the button again to switch the unit on.• Unplug the unit from the mains socket, then plug them again. Switch on the unit.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none">• The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.

CD

Problem	Solution
Disc in place but the unit won't play.	<ul style="list-style-type: none">• Make sure you've selected CD mode.• Make sure the disc label is facing up.• Make sure the disc is clean.• PAUSE mode may be activated, deactivate it.• Disc may be damaged or dirty; check and clean the disc.
Disc skips	<ul style="list-style-type: none">• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.

Radio

Problem	Solution
Poor radio reception.	<ul style="list-style-type: none">• Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Desired station not found.	<ul style="list-style-type: none">• Weak signal. Search manually.• If reception is still poor, adjust the position of the aerial.

Bluetooth®

Problem	Solution
I cannot find "MX-DN550" on my Bluetooth® device.	<ul style="list-style-type: none">• Ensure the Bluetooth® function is activated on your Bluetooth® device.• Ensure you have paired your unit with the Bluetooth® device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand	JVC
Model	MX-DN550
System Section	
Power Supply	100 - 240 V ~ 50/60 Hz
Power Consumption	120 W
Working Environment - Temperature	-10 ~ +35 °C
Working Environment - Relative Humidity	5% ~ 90%
Unit Dimension (W) × (D) × (H)	200 mm × 305 mm × 300 mm
Speakers Section	
Impedance	3 Ω
Output Peak Power	630 Watts Peak Power (2 × 315 Watts)
Output RMS Power	400 Watts RMS output (2 × 200 Watts)
Speaker Box Dimension (W) × (D) × (H)	243 mm × 240 mm × 352 mm
Compact Disc Section	
Optical Pickup	3 - Beam Laser
Frequency Response	100 Hz – 10 kHz
Radio Section	
Frequency Range	FM 87.5 – 108 MHz
USB Section	
USB Memory Stick Memory Size	Up to 16 GB

Features and specifications are subject to change without prior notice.

Useful Information and Licences



For general information about this appliance and handy hints and tips, please visit www.knowhow.com/knowledgebank or call UK: **0344 561 1234** Ireland: **1890 818 575**.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for Battery Disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by DSG Retail Limited is under license. Other trademarks and trade names are those of their respective owners and all rights are acknowledged.

Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

This radio is future-ready because it contains FM which is a future technology standard being adopted across Europe.

All trademarks are the property of their respective owners and all rights are acknowledged.

Dear Customer,

This apparatus is in conformance with the valid European directives compatibility and electrical safety.

European representative of the manufacturer is:

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

For Help and Support Call

UK: 0344 561 1234

Ireland: 1890 818 575

The product is distributed and warranted exclusive by DSG Retail Ltd.
"JVC" is the trademark of JVC KENWOOD Corporation, used by DSG Retail Ltd. under license.

(IB-MX-DN550-160920V3)