

JVC

Instruction Manual
Portable Wireless Speaker
with NFC One-Touch Pairing
SP-AD60-M / SP-AD60-H



Contents

Safety Warnings	4
Unpacking	8
Product Overview	9
Front View.....	9
Top View.....	10
Right Side View.....	11
Charging the Speaker	12
Battery Life	13
When the Battery is Almost Empty	14
Connection	14
Using the AUX Connection.....	14
General Operation	15
Powering ON/OFF	15
Automatic Power Off Function	15
Adjusting the Volume	15
Bluetooth® Operation	16
NFC (Near Field Communication) Operation	17

Listening to Music	18
<i>Bluetooth®</i> Mode	18
AUX Mode.....	18
Hands-free Calling.....	19
Making a Call	19
Redial.....	20
End Call	20
Receiving a Call	20
Reject an Incoming Call	20
Maintenance	21
Hints and Tips.....	22
Product Fiche and Specifications.....	24
Useful Information and Licences.....	26

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- Do not place the unit close to table edge. It may fall off due to vibration during high volume listening.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Built-in Battery Care

- Your product is powered by a rechargeable battery.
- The battery can be charged and discharged hundreds of times, but will eventually wear out.
- Unplug the charger from the electrical plug and the product when not in use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep your device in a cool, moisture-free environment that's less than 32°C. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

- The unit should be fully recharged after using the device each time. This will keep the health of the battery.
- If you plan to store your device for longer than six months, charge the battery for an hour every six months to keep it fresh.

Battery warning!

- The battery used in this product may present a risk of fire or chemical burn if mistreated.
- Do not attempt to open the product or replace the battery. It is built-in and not changeable. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.
- Only recharge your battery with the provided approved charger or USB cable designated for this product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste or in a fire as they may explode.
- Batteries may explode if damaged.

Maintenance

- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Thank you for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

 
- Main Unit
- USB to Micro USB Cable
- 3.5mm to 3.5mm Stereo Audio Cable
- Instruction Manual



If items are missing, or damaged please contact Partmaster (UK only).
Tel: 0344 800 3456 for assistance.

Product Overview

Front View

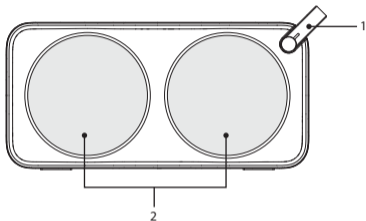

1. **Hand Strap**

 
A hand strap is designed for easy carrying.



The hand strap is not for hanging the unit.

2. **Speaker**

Top View



1. **NFC (Near Field Communication) Sensor**

2. **Bluetooth** Button

- Activate the pairing function in *Bluetooth*[®] mode or disconnect the existing paired *Bluetooth*[®] device.
- Play / pause / resume playback in **Bluetooth**[®] mode.
- Mute the unit or resume the sound in **AUX** mode.
- Control various call functions in **Phone Calls** mode.

3. **+ / -** Button

 
- Adjust the volume.
- Reject an incoming call.

4. **Power** Button

- Switch the unit On / Off.
- Battery Charging Indicator

5. **Mic**

Right Side View

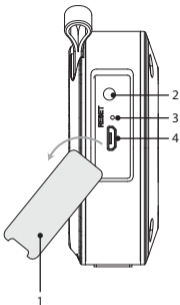

1. **Jack Cover**
2. **AUX Socket**
Connect a music player, etc. to this socket by using an supplied Stereo Audio Cable.
3. **RESET Button**
Press the button with a pointing object, such as a pin, to reset the unit.
4. **Micro-USB Socket**
Connect a computer, etc. to this socket with the supplied micro-USB cable to charge the unit.

 


Open the jack cover at the right side of the unit for the connector panel shown above.


Charging the Speaker

The unit has a built-in rechargeable battery, which should be charged before using the speaker for the first time.


 
The battery is charged automatically whenever the unit is connected to a computer or a USB charging device.

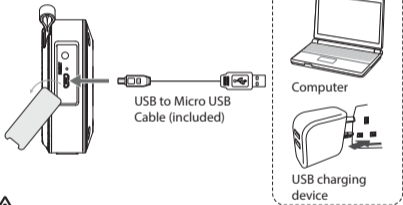

- Micro-USB socket is for charging the unit only.
- Do not overcharge the battery as it may shorten its life. Disconnect the USB cable after the unit is fully charged.

1. Open the jack cover of the speaker.
2. Connect the supplied micro-USB cable to the speaker, and then connect the other end to a computer.
3. The light of the  button will flash during charging. The light will go off automatically after fully charge.




- Use the supplied micro-USB cable only, and connect directly to a computer. Charging will not be completed properly by an indirect connection, such as via a USB hub.
- If the unit is not used for a long time, the light of the  button may not light up when you connect the micro-USB cable to charge the unit. In this case, do not disconnect the micro-USB cable from the unit and wait until the light of the  button lights up.
- Charging time varies depending on conditions of use of the battery and the output voltage of your charging device.
- The unit will get warm during charging. This is not a malfunction.

Battery Life

When using the *Bluetooth*[®] connection, the speaker has approx. 6 hours of playback time in fully charge status and in medium sound level. Time stated above may vary, depending on ambient temperature or conditions of use.

When the Battery is Almost Empty

The speaker will voice “Low battery, please connect to charger” and the light of the  button will flash. When the battery becomes empty, the speaker turns off automatically.

 
Connection

Using the AUX Connection

Use the supplied 3.5mm to 3.5mm stereo audio cable to connect the headphone socket of an audio device and the **AUX** socket of the unit.



The unit will switch the source to **AUX** mode automatically, and you will hear a message from the unit.

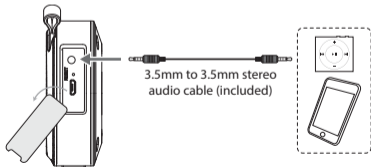Disconnect the audio cable to enable *Bluetooth*[®] mode.



General Operation

Powering ON/OFF

- Press  Button to switch on the unit. You will hear a greeting message from the unit.
- Press and hold  Button to switch off the unit.

Automatic Power Off Function

If the speaker is left in any of the following conditions for more than approx. 15 minutes, it turns off automatically.


- No *Bluetooth*® connection has been established between the unit and the external mobile device.
- When the battery becomes empty, the unit turns off automatically.



Adjusting the Volume

During playback, press + / – buttons on the unit to increase or decrease the volume. The unit beeps when set to the highest volume level in *Bluetooth*® mode during playback.

Bluetooth® Operation

Switch the speaker on. The unit will find the last paired *Bluetooth®* device and connect automatically.

If there is no previously paired device found, the speaker will enter *Bluetooth®* pairing mode automatically. The light of  button will flash rapidly. Follow the steps below to pair the unit with a *Bluetooth®* device.

1. Activate your *Bluetooth®* device and select the search mode. “**SP-AD60-M**” or “**SP-AD60-H**” will appear on your *Bluetooth®* device list.
2. Select “**SP-AD60-M**” or “**SP-AD60-H**” and enter “**0000**” for the password if necessary. If connect successful, the light of  button will light up and the unit will voice “**Connected**”.
3. To disconnect the *Bluetooth®* function, press and hold  button to disable the function from your *Bluetooth®* device. The *Bluetooth®* device will be disconnected from the unit after the “**Waiting for connection**” voice prompt.





- Connect the stereo audio cable to disable *Bluetooth®* mode.
- You can enjoy music wirelessly from a smartphone, mobile phone, or music player. Also, you can make or receive a call by operating the unit.

- The operational range between the unit and the device is approximately 10 metres. Any obstacle between the device and the unit can reduce operational range.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the device's capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

NFC (Near Field Communication) Operation

Pair your NFC-enabled mobile device directly with this unit by just a single tap.

1. Activate NFC on your mobile device.
2. Hold your mobile device about or less than 1.5cm close to the  icon of unit. The device vibrates or a message pops up.
3. To disconnect, hold the mobile device on the  icon of the unit to disconnect or disable NFC from your mobile device.

Listening to Music

Bluetooth® Mode

You can enjoy listening to music and basic remote control operation of a *Bluetooth®* device via a *Bluetooth®* connection. The *Bluetooth®* device is required to support the following *Bluetooth®* profiles.

- A2DP (Advanced Audio Distribution Profile): you are able to enjoy high-quality audio content wirelessly.
- AVRCP (Audio Video Remote Control Profile): use the unit to control play.
 - To pause / resume playback, press **⏸** once.
 - To increase or decrease the volume, press **+ / -** .

AUX Mode

If you connect an audio cable to the AUX socket, the output from the device connected to the AUX socket has priority, and you will not hear the sound from the *Bluetooth®* device. The light of **⏸** button will switch off and the unit will voice "**AUX music**". Absence of sound from the *Bluetooth®* device does not indicate any trouble with the system.

During playback, press **⏸** to mute the unit or resume the sound.

Hands-free Calling

You can enjoy a hands-free call with a *Bluetooth*[®] smartphone or mobile phone that supports the *Bluetooth*[®] profile HFP (Hands-free Profile) or HSP (Headset Profile), via a *Bluetooth*[®] connection.

Call functions are only applicable if mobile phone is paired and connected with the speaker and both are switched on.



The function available may vary depending on the profile supported by your *Bluetooth*[®] smartphone or mobile phone. Even if the phone has the same profile, functions may vary depending on the specifications. Please refer to the manual supplied with your smartphone or mobile phone.

Making a Call

1. Activate *Bluetooth*[®] mode on your mobile device.
2. Use the buttons on your mobile device when making a call.



If the caller cannot or can barely hear your voice, press + / - button to adjust the volume or talk into the microphone of the speaker.

Redial

Press * button twice rapidly to redial the last call.

End Call

Press * button on the speaker to hang up the phone. You can also end the call from your phone.

Receiving a Call

When an incoming call arrives, a ring tone will be heard via the speaker.

Press * button on the speaker. You will be able to hear your call through your speaker. The built in microphone will allow you to converse with the caller.

Reject an Incoming Call

Press + / - button once on the speaker to reject an incoming call.

Maintenance



Ensure the unit is fully removed the cables from the unit before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.


Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance,

- for UK, please call our UK Call Centre on **0344 561 1234**.
- for Ireland, please call our Ireland Call Center on **1 890 818 575**.

Problem	Solution
No power.	<ul style="list-style-type: none">• The battery may be exhausted. Connect the USB cable and plug into a USB port of a computer which is turned on.• Ensure that the unit is switched on.
No Sound.	<ul style="list-style-type: none">• Ensure that the unit is switched on.• Check the volume level of the unit.• Check the sound input source.
Sound is distorted.	<ul style="list-style-type: none">• Volume is too high. Adjust the volume control.
Not charging.	<ul style="list-style-type: none">• Ensure that the micro-USB charging cable is correctly connected with the unit.

Problem	Solution
<p>I cannot find “SP-AD60-M” or “SP-AD60-H” on my <i>Bluetooth</i>[®] device.</p>	<ul style="list-style-type: none"> • Ensure that the unit is switched on. • Ensure that the <i>Bluetooth</i>[®] function is activated on your <i>Bluetooth</i>[®] device. • The unit has a <i>Bluetooth</i>[®] function that can receive a signal within 10 metres. Keep a distance within 10 metres between the unit and your <i>Bluetooth</i>[®] device.
<p>Voice interrupted in <i>Bluetooth</i>[®] mode.</p>	<ul style="list-style-type: none"> • Ensure that the unit and <i>Bluetooth</i>[®] device is connected within 10 metres. • Ensure that no obstruction between the unit and the <i>Bluetooth</i>[®] device.
<p>NFC Pairing failed.</p>	<ul style="list-style-type: none"> • Ensure that the <i>Bluetooth</i>[®] device supports NFC function. • Ensure that the unit is in pairing mode. • For first time pairing, ensure that the <i>Bluetooth</i>[®] device touches NFC sensor of the unit. • Remove mobile phone protection shell for NFC pairing.

Problem	Solution
No Sound in AUX mode.	<ul style="list-style-type: none"> • Ensure the audio cable is properly connected.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none"> • The unit may freeze up during use. Switch the unit off and then on again to reset the unit. • Use a toothpick or needle to press the reset hole, and then press  button on the unit again.

Product Fiche and Specifications

Brand	JVC
Model	SP-AD60-M (Champaign gold) / SP-AD60-H (Black)
Speaker	4Ω × 2
Frequency Response	100Hz-20kHz (±3dB)
Power Amplifier	Class D @ 3W × 2CH

THD	< 1%	
SNR	>75dB(A)	
Sound Pressure Level	83dB± 3dB (500mV@1M)	
Charging Input	DC 5V, 1A (Micro USB)	
Charging Time	Approx. 3 hours (DC5V, 1A [Micro USB])	
Dimension	160mm × 77mm × 29mm	
Weight	278g	
Bluetooth®	Bluetooth® Version	V2.1 EDR (A2DP, AVRCP, HFP)
	Frequency bands	2402 MHz - 2480 MHz
	Maximum transmitted power	8.1 dBm

Features and specifications are subject to change without prior notice.

Useful Information and Licences



Team Knowhow

Help with all life's kit®

For general information about this appliance and handy hints and tips, please visit www.knowhow.com/knowledgebank or call

UK: **0344 561 1234**

Ireland: **1890 818 575.**

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories.

With over 1 million spares and accessories

available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only).

Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by DSG Retail Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

Dear Customer,

This apparatus is in conformance with the valid European directives compatibility and electrical safety.

European representative of the manufacturer is:

DSG Retail Ltd. (co. no. 504877)

1 Portal Way, London, W3 6RS, UK

For Help and Support Call

UK: 0344 561 1234

Ireland: 1890 818 575

The product is distributed and warranted exclusive by DSG Retail Ltd.

"JVC" is the trademark of JVC KENWOOD Corporation,
used by DSG Retail Ltd. under license.

(IB-SP-AD60-M_H-180716V4)