

4 Slice Toaster

L04TBK14
L04TC14
L04TR14



Thank you for purchasing your new Logik Toaster.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.



For general information about this appliance and handy hints and tips, please visit

www.knowhow.com/knowledgebank or call 0344 5611234.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories.

With over 1 million spares and accessories

available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

SAFETY FIRST!

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all the instructions carefully before using the appliance and keep them for future reference.
- Retain the manual. If you pass the appliance onto a third party, make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the appliance for damage after unpacking.
- Do not continue to operate the appliance if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug the toaster from the mains and consult your dealer.

Location of Appliance

- This appliance is intended for indoor household use and similar applications such as:
 - farm houses and by clients in hotels, motels and other residential type environment;
 - bed and breakfast type environment;
 - catering and similar non-retail applications.

GB-1

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the appliance well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Do not touch hot surfaces. Temperature of accessible surfaces may be very high when the appliance is operating. Let the appliance cool down completely before touching it. Keep children away.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the appliance.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this appliance to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the appliance.
- If you spill any liquid into the appliance, it can cause serious damage. Switch it off at the mains immediately and unplug it.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this appliance in a bookcase, built-in cabinet or in another confined space. Ensure the appliance is well ventilated.

GB-2

Mains Cable

- Make sure the appliance is not resting on top of the mains cable, as the weight of the appliance may damage the mains cable and create a safety hazard.
- Do not let the mains cable overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Supervision

- This appliance can be used by persons aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are older than 8 years old and are supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case – this could result in a fatal electric shock.

GB-4

Service

- To reduce the risk of electric shock, do not remove screws. The appliance does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure the appliance is unplugged before cleaning.
- Allow the appliance to cool completely before cleaning or storing.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the appliance's surface.
- Do not use liquids to clean the appliance.

GB-5

Safety

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always disconnect the appliance from the mains supply before moving the appliance.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the appliance unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Disconnect the mains plug from the mains socket.
- Bread may burn. Your appliance must not be used near or below curtains or other combustible materials. It must be watched when in use.
- Only toast bread in your appliance. Do not attempt to toast any pastry or bread product which is filled with a fruit or sugary filling (pop tarts etc). The stuffing may leak from the pastry or bread pocket and damage your appliance with the possible risk of a fire occurring.
- Oversize food, metal foil packages or utensils must not be inserted in the appliance as they may cause fire or electric shock.
- Do not attempt to dislodge food while the appliance is in use.
- Take the bread out carefully after toasting to avoid injuries.
- Do not use the appliance for anything other than its intended use.

GB-3

GB-6

 
UNPACKING

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit




Instruction Manual

If items are missing or damaged, please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.

GB-7

PRODUCT OVERVIEW

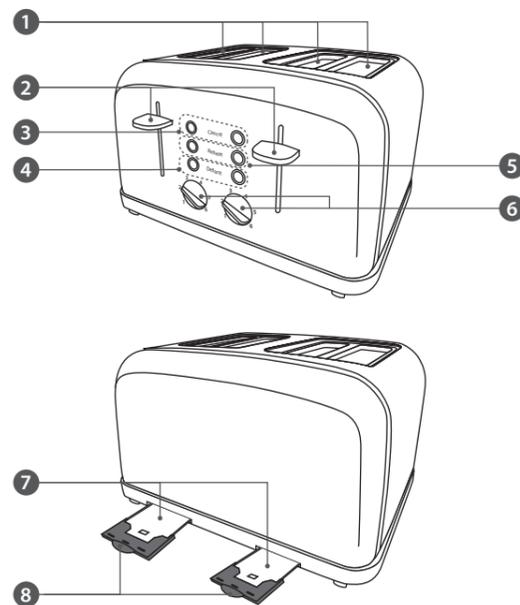

- | | |
|------------------|---------------------|
| 1 Toast Slots | 5 REHEAT Button |
| 2 Toasting Lever | 6 Browning Control |
| 3 CANCEL Button | 7 Crumb Tray |
| 4 DEFROST Button | 8 Crumb Tray Handle |


GB-8

FIRST TIME USE

Please note there may be manufacturing residue or oil remaining in the toaster or heating element. Odour may be emitted the first time you use it. This is normal and will not occur after using your toaster for several times. The first 2 times you use your toaster we suggest that you operate it without bread.

TOASTING BREAD


To prevent jamming, do not use your toaster with torn slices of bread. Make sure the size and thickness of the slices of bread fit easily into the toast slots. Always watch your toaster when in use. Never leave your toaster unattended.

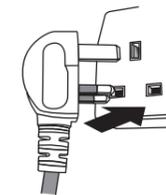

1. Plug the mains plug into the mains socket.
2. Remove all protective wrapping. Put bread slices into the bread slots. Avoid toasting bread with ingredients such as butter.

GB-9

3. Select the level of browning by turning the Browning Control. There are 6-setting levels:

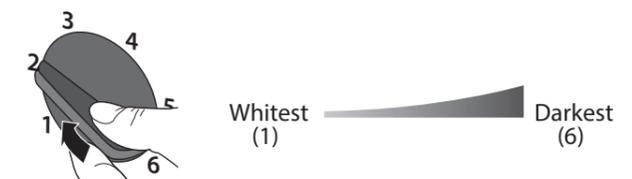

- Select a lower position (i.e. 1 or 2) for light browning, especially for toasting only one slice or for dry (old) bread. Note that the toasting colour for one slice will be darker than that for two slices at the same browning level.
- If you have already toasted some bread, the toaster elements will be hot, so when you put some more bread into the toaster it may brown faster than the first slices that were toasted, even if the Browning Control is set to the same level.

GB-10

4. Lower the toasting lever down vertically until it is positioned in place. The toaster will begin at once.



- Only when the toaster is connected to the mains power can the toasting lever be locked in the downward position.
- During the toasting process, you may observe the toasting colour. Press the CANCEL button to cancel the operation at any time.

5. Once the bread has been toasted to the preset browning level, the toasting lever will automatically pop up.

GB-11

OTHER FUNCTIONS

Reheat

1. Insert the cold slices of toast and lower the toasting lever until it remains in a downward position. In this mode, setting the browning control will have no effect as the toasting time is fixed. When the time runs out, the toasting lever will automatically pop up and finish the reheating process.
2. Press the **REHEAT** button. The indicator will illuminate.

Defrost

1. Insert the frozen bread.
2. Set the browning control to your desired colour.
3. Lower the toasting lever down until it remains in a downward position, then press the **DEFROST** button. The indicator will illuminate.


Cancel

During the toasting process, you can press the **CANCEL** button to stop the operation at any time.

GB-12

REMOVING CRUMBS FROM THE TOASTER

1. Remove the mains plug from the mains socket.
2. Slide the crumb tray out by holding the crumb tray handle. (The metal part may be hot.)
3. Empty the crumbs into the bin and clean the crumb tray.

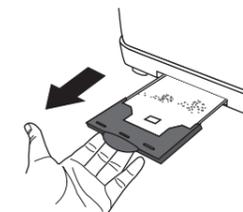

- Let the crumb tray dry thoroughly before reinserting it back into the toaster.
- Ensure the crumb tray is completely inserted before using your toaster again.

HOW TO CLEAR A PIECE OF JAMMED BREAD

1. Remove the mains plug from the mains socket.
2. Allow the toaster to completely cool down.
3. Push and hold the toasting lever down then release.
4. Gently dislodge the jammed bread with a non-metallic object, for example the handle of a wooden spoon.



- Ensure you do not touch the heating elements, as you may damage them.

GB-13

CLEANING AND MAINTENANCE

Unplug the toaster from the mains socket and allow the toaster to cool down before cleaning.

Do not use harsh cleaners or solvents as they may damage the casing.

The body of the toaster should be cleaned using a cloth dampened with warm water and detergent. Make sure you do not allow water to seep into the controls or heating elements.

SPECIFICATIONS

Mains supply: 220-240V~50Hz
Power consumption: 1450-1750W

We continually strive to improve our products. Specifications may change without prior notice.

GB-14