

LOGIK | Quick Start Guide

9" Portable DVD Player

L9SPDVD16

Thank you for purchasing your new product.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.



Unpacking


- DVD Player
- Remote Control
- Mains Adapter
- Earphones

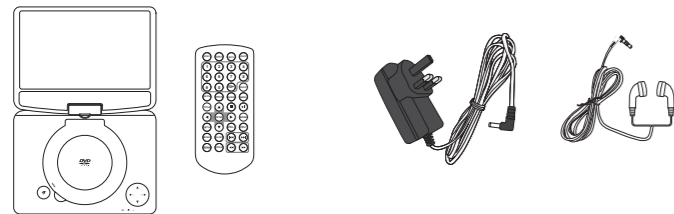

- Car Power Adapter
- 3.5mm to RCA AV Converter
- Support




- Screws × 4 (ø4 × 25mm)
- Instruction Manual
- Quick Start Guide

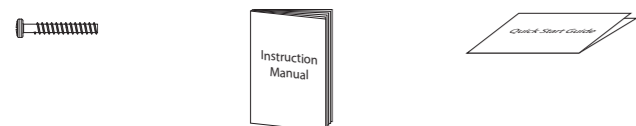

Operating your remote control


Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom end of the remote control.

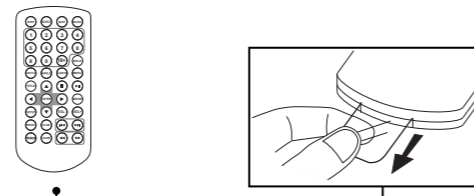


! Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.

Power supply

Using the Mains Adapter
(for indoor use)


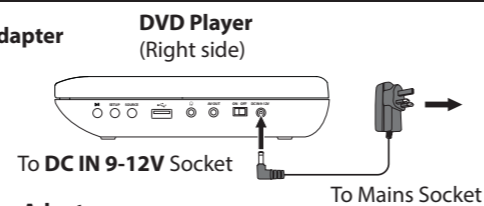


Using the Car Power Adapter
(for in-car use)

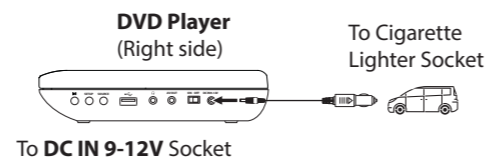


Mounting in a car

- Unscrew the screws holding the horizontal mounting bar together. Slip both halves of the mounting bar around the headrests' leg supports. Screw in the screws, loosely. Ensure that the mounting bar is level. Tighten the screws.
- Grip the DVD firmly with both hands and slot the angled support firmly into the support bar. It will click. Ensure the entire unit is secure.

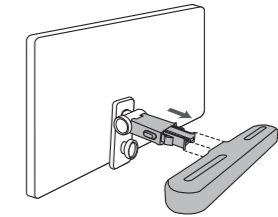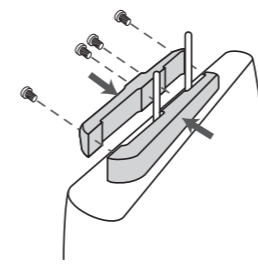


Installation Guide

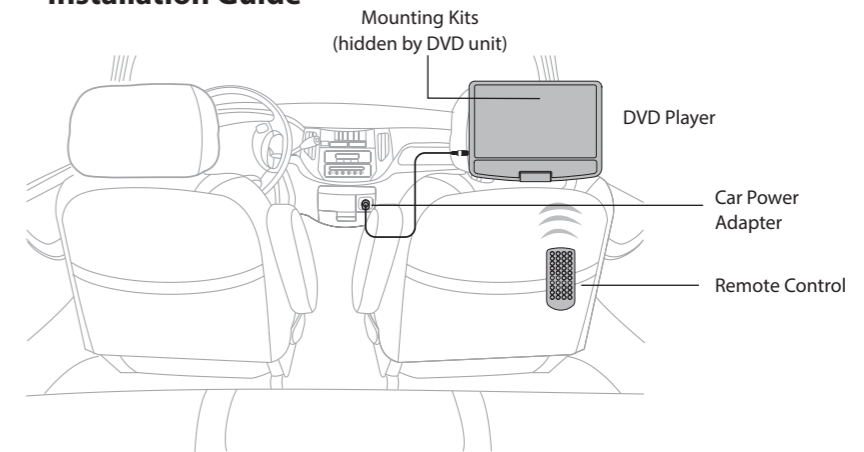

Basic operation

- Slide the **ON/OFF** switch on the unit to the **ON** position.
- Press the **OPEN** switch on the unit to open the disc cover.
- Hold the disc by its edges and carefully place onto the disc holder with the label side facing up. Gently push the disc down until you hear a "click".
- Close the disc cover. The unit starts playback if the disc does not have any menus recorded on it. If the disc has one or more titles recorded on it, a menu screen will appear on the screen.
- To play a title, press the **◀▶** buttons on the unit or press the **◀▶** / **0-9** / **10+** buttons on the remote control to highlight the track title and then press the **ENTER** button on the unit or the remote control to confirm.

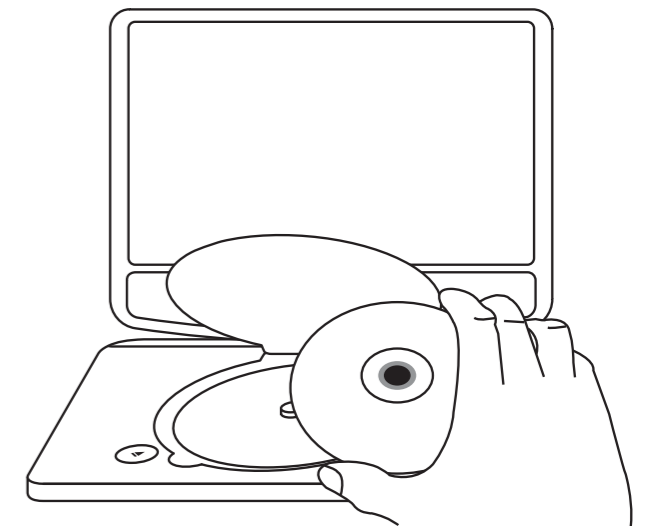

Tip: You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided.