

LOGIK

Wireless Optical Mouse

 
Quick Start Guide
LWL0M10



Congratulations on the purchase of your new Logik Wireless Optical Mouse. Before the set up, please check that you have all the items and familiarise yourself with this Quick Start Guide.

1 Unpacking


Remove all packaging from the unit. Retain the packaging. If you dispose of it, please do so according to the local regulations. The following items are included:

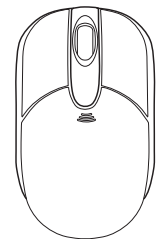

Mouse



 USB Receiver
(PN.: SOOR6605+140300)

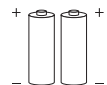

Batteries
(AAA size)



Quick Start Guide
(PN.: WO0M6605+110000)

 
 
If items are missing or damaged, please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.

SYSTEM REQUIREMENTS

Operating Systems: Microsoft® Windows®2000/ XP/ Vista™ & Windows®7
Hardware: 1 available USB port

GB-1

2 Install the Batteries

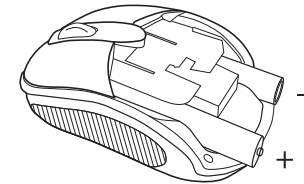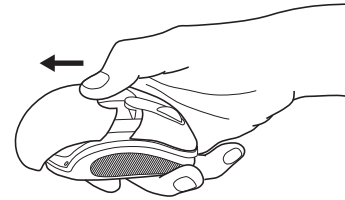


Slide the battery cover off and insert 2 x AAA batteries. Close the battery cover. Ensure batteries are inserted with the correct polarity.

3 Connect the USB Receiver

Plug the USB receiver directly into your computer's USB port.

 The red LED light will illuminate.

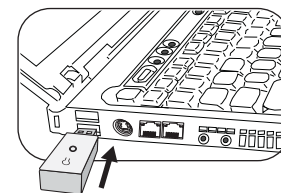


GB-2

4 Activate the Wireless Mouse


Press the **Connect** button on both the mouse and the USB receiver to activate the connection between the mouse and the USB receiver.

 Note : For energy saving, press and hold the **Connect** button on the mouse for 3 seconds to temporarily turn off the mouse and its connections with the USB receiver. Press the **Connect** button again to turn it back on.

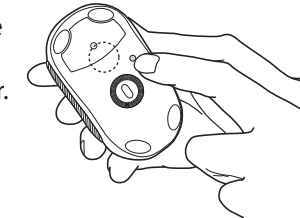


Flashing Red LED Light

 When the USB receiver and the mouse are connected and in use, the red LED light on the USB receiver will flash.

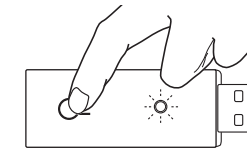

5 Product Overview

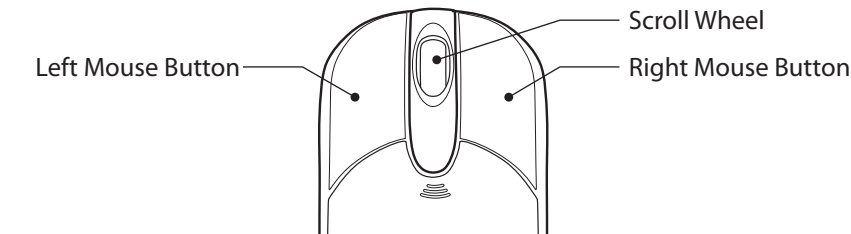 


GB-3

6 Sleep Mode Function

After the mouse has been in on idle state for 8 minutes, it will go into Sleep Mode.

 To reactivate the mouse, click on either the **Right** or the **Left** mouse button.

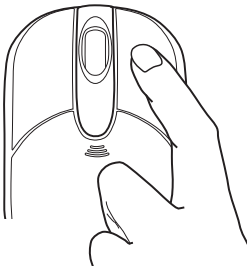


7 Troubleshooting

Mouse Not Working :

1. Make sure the USB receiver is plugged into a USB port and the computer is on.
2. Check battery installation. Replace batteries if needed.
3. If mouse performance is slow or intermittent around a wireless network, unplug the USB receiver from the USB port and then reinsert it. Press the **Connect** button again on the bottom of the mouse to reactivate it.

8 Safety

Optical :
Never point the optical sensor towards the face, particularly the eyes, to avoid possible injury.

 While the mouse is functioning, the optical light is visible to the naked eye. Be careful not to look directly into the emitter hole while the mouse is active.

Wireless Devices :
Before boarding any aircraft or packing a wireless device in luggage that will be checked, remove the batteries from the wireless device. Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turn on.

Battery-Powered Devices :
Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed.

8 Safety

To reduce the risk of injury :

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- Do not mix new and old batteries or batteries of different types
- Do not allow metal objects to touch the battery terminals on the device; they can become hot and cause burns.

Features and specifications are subject to change without prior notice. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal:
The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, disposal of used batteries according to your local laws or regulations. Do not dispose of batteries with the normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.